

**ANALOG TIMER
ATE/ATE1/ATE2**

M A N U A L

Thank you very much for selecting Autonics products.
For your safety, please read the following before using.

Caution for your safety

- ※ Please keep these instructions and review them before using this unit.
- ※ Please observe the cautions that follow;
 - Warning** Serious injury may result if instructions are not followed.
 - Caution** Product may be damaged, or injury may result if instructions are not followed.
- ※ The following is an explanation of the symbols used in the operation manual.
 - ⚠ caution: Injury or danger may occur under special conditions.


Warning

- 1. In case of using this unit with machineries(Nuclear power control, medical equipment, vehicle, train, airplane, combustion apparatus, entertainment or safety device etc), it requires installing fail-safe device, or contact us for information required.**
It may result in serious damage, fire or human injury
- 2. The unit must be mounted on panel.**
It may give an electric shock.
- 3. Do not connect terminals when it is power on.**
It may give an electric shock.
- 4. Do not disassemble and modify this unit, when it requires. If needs, please contact us.**
It may give an electric shock and cause a fire.

Caution

- 1. This unit shall not be used outdoors.**
It might shorten the life cycle of the product or give an electric shock.
- 2. Please observe specification rating.**
It might shorten the life cycle of the product and cause a fire.
- 3. Do not use the load beyond rated switching capacity of Relay contact.**
It may cause insulation failure, contact melt, contact failure, relay broken, fire etc.
- 4. In cleaning the unit, do not use water or an organic solvents.**
It might cause an electric shock or fire that will result in damage to the product.
- 5. Do not use this unit at place where there are flammable or explosive gas, humidity, direct ray of the sun, radiant heat, vibration, impact etc.**
It may cause a fire of mechanical trouble.
- 6. Do not inflow dust or wire dregs into inside of this unit.**
It may cause a fire of mechanical trouble.

Dimensions

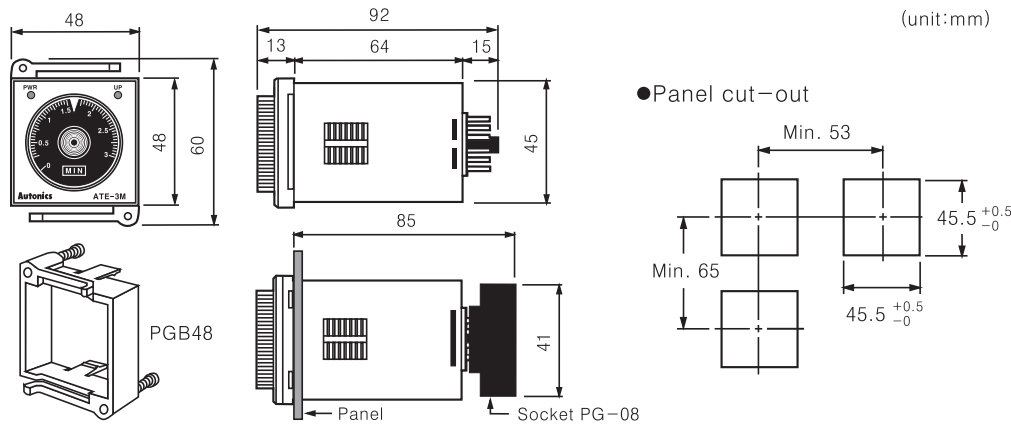


※ The above specification are Change and some models may be discontinued without notice.


Specifications

Model		ATE - s m h	ATE1 - s m h	ATE2 - s m h
Function		POWER ON DELAY		
Control time setting range		sec.(1, 3, 6, 10, 30, 60), min.(3, 6, 10, 30, 60), hour(3, 6, 12, 24)		
Power supply		110/220VAC 50/60Hz	110/220VAC 50/60Hz, 12VDC, 24VDC(Option)	
Allowable voltage range		90 to 110% of rated voltage		
Power consumption		Min. 10VA(240VAC 60Hz), Min. 2W(DC option)		
Return time		Max. 200ms		
Control output	Contact	Time-limit contact SPDT(1c) Instantaneous SPST(1a)	Time-limit contact DPDT(2c)	Time-limit contact SPDT(1c) Instantaneous SPST(1c)
	Capacity	250VAC 3A resistive load		
Repeat error		Max. ±0.3%		
Setting error		Max. ±5% ±0.05sec.		
Voltage error		Max. ±0.5%		
Temperature error		Max. ±2%		
Ambient temperature		-10 to 55°C (at non-freezing status)		
Storage temperature		-25 to 65°C (at non-freezing status)		
Ambient humidity		35 to 85%RH		
Relay life cycle	Mechanical	Min. 10,000,000 times		
	Electrical	Min. 100,000 times(250VAC 3A resistive load)		
Weight		Approx. 100g		

Connections

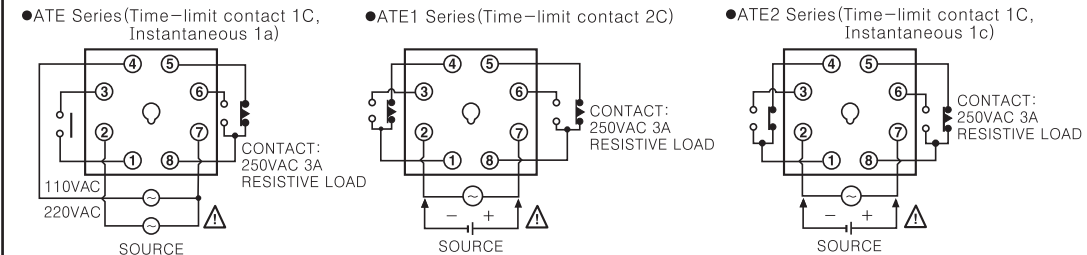

Operation mode

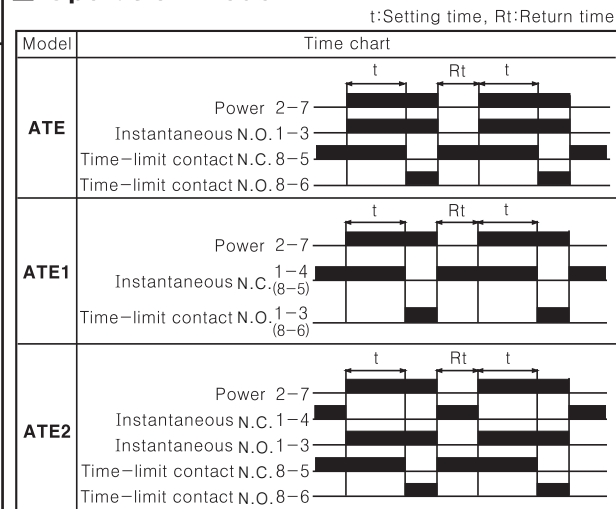

Autonics Corporation
<http://www.autonics.com>

■ HEADQUARTERS :
18, Banson-g-ro 513beon-gil, Haeundae-gu, Busan, South Korea, 48002

■ OVERSEAS SALES :
#402-303, Bucheon Techno Park, 655, Pyeongcheon-ro, Wonmi-gu, Bucheon, Gyeonggi-do, South Koera, 14502

■ E-mail: sales@autonics.com