Autonics DRW190253AD

Safety Door Lock Switch



SFDL Series

For your safety, read and follow the considerations written in the instruction manual, other manuals and Autonics website.

The specifications, dimensions, etc. are subject to change without notice for product improvement. Some models may be discontinued without notice.

Main Features

- Available to change the direction of inserting the operation key by rotating head : Inserting the operation key from 5 directions in the top and side
- Various kinds of contact composition :4-contact (connected), 4-contact (not connected), 5-contact, 6-contact
- · Selectable between connector type which reduces working process and separable terminal type which is useful for maintenance
- Manual unlock function (release key) to handle the emergency and test for safe
- : Cross type/special type release key line-up
- Minimized solenoid heat with stable current supply
- · Excellent solidity/durability of metallic head
- · Applicable to various applications using the slide key unit accessory

Safety Considerations

- Observe all 'Safety Considerations' for safe and proper operation to avoid hazards.
- ▲ symbol indicates caution due to special circumstances in which hazards may occur

Marning Failure to follow instructions may result in serious injury or death.

- O1. Fail-safe device must be installed when using the unit with machinery that may cause serious injury or substantial economic loss. (e.g. nuclear power control, medical equipment, ships, vehicles, railways, aircraft, combustion apparatus, safety equipment, crime/disaster prevention devices, etc.)
 Failure to follow this instruction may result in personal injury, economic loss or fire.

 O2. System manager means followings;
 a personnel who is fully aware of installation, setting, operation, and maintenance of the product
 a personnel who well observes standard/regulation/statute on the product by type of machine the product installed in and nation/region the product used in Machine user means a personnel who is appropriately trained about using machine by the

- Machine user means a personnel who is appropriately trained about using machine by the

manager, so that machine user can operate the machine correctly.

System manager has duty to train the machine user about operation of the product. Machine user has to report directly to the system manager when unusual status has been found while system is operating.

Failure to follow this instruction may result in personal injury, economic loss or fire.

O3. The product has to be installed, set, and combined with machine control system by the

qualified system manager.
Failure to follow this instruction may result in personal injury due to unintended operation and unstable detection.

Before using the product, check that function of the product operates as intended while machine is turned off after installation.

Failure to follow this instruction may result in personal injury due to unintended operation and unstable detection.

unstable detection.

5. Do not use the unit in the place where flammable/explosive/corrosive gas, high humidity, direct sunlight, radiant heat, vibration, impact, salinity, moisture, or steam, or dust may be present.

Failure to follow this instruction may result in explosion or fire.

6. Do not disassemble or modify the unit.

- 50. Do not disassemble or moonly the unit.
 Failure to follow this instruction may result in personal injury or fire due to loss of safety function.
 O7. Be cautious about the installing place of the operation key in order to protect worker from hitting the operation key when the door is opened.
 Failure to follow this instruction may result in personal injury.
 O8. Do not use a head of the door switch (SFD Series).

ranure to follow this instruction may result in personal injury or fire due to loss of safety function. Install separate safety device to fix door closed, or door can be opened because of vibration or weight of the door.

Failure to follow this instruction may result in

- Check the installed status of the switch, operating status of the switch, and signs of damage, modification, tampering of the switch at the following situation and on a weekly
 - when operating the safety system at first

- when replacing component of the system
- when the system has not been operated for a long time
Failure to follow this instruction may result in personal injury al injury due to malfunction of the product

- Solenoid Lock/Mechanical Release type switch is locked with power connected and is unlocked without power. Be cautious that the switch can be unlocked before complete stop of the machine when blackout occurs.
 - e to follow this instruction may result in personal injury.
- Check 'Connections' before wiring.
 Failure to follow this instruction may result in fire.

⚠ Caution Failure to follow instructions may result in injury or product damage.

- 01. Use the unit within the rated specifications.
- Saiture to follow this instruction may result in fire or product damage.

 Since solenoid has polarity, wire cables and supply voltage ensuring correct polarity. Do not supply voltage above the rated voltage specification.

 Failure to follow this instruction may result in fire or solenoid damage.
- Use a dry cloth to clean the unit, and do not use water or organic solvent.

 Failure to follow this instruction may result in fire.

 Keep the door switch away from debris and tighten the screw securely when replacing the

- Failure to follow this instruction may result in malfunction.

 Keep the product away from metal chip, dust, and wire residue which might flow into the Failure to follow this instruction may result in fire, product damage or malfunctio
- O6. Do not use the switch as a guard door stopper. Install separate mechanical stopper.
 Failure to follow this instruction may result in product damage.

 O7. Carefully manage the spare operation key in order to prevent use of the key without

permission.Failure to follow this instruction may result in loss of safety function due to insertion of the spare

- 08. Use only Autonics operation key.
 - Failure to follow this instruction may result in product damage.
- Install the operation key tightly within the range written in 'Installation' with welding, rivet, or special bolt in order not to be easily released from the switch.

 Failure to follow this instruction may result in product damage.



Cautions during Use

- Follow instructions in 'Cautions during Use'. Otherwise, it may cause unexpected accidents.
- Use the switch with the dedicated controller. Do not use the switch with another controller randomly.
- When it comes to the Solenoid Lock/Mechanical Release model, make it to be locked by supplying power after the door is closed. If the power is supplied when the door is opened, the switch will not be locked.
- This unit may be used in the following environments. Indoors (in the environment condition rated in 'Specifications')
 - -Altitude max. 2,000m
- Pollution degree 3 Installation category III
- Enclosure Type T

Sold Separately

- Slide key unitConnector cable for the connector type model

Ordering Information

This is only for reference.

For selecting the specific model, follow the Autonics web site.

SFDL 0 0 8 4 ø 0

Lock/Release method

M: Mechanical Lock/Solenoid Release S: Solenoid Lock/Mechanical Release

No-mark: 4-contct (connected) C: 4-contact (not connected) 5: 5-contact 6: 6-contact

Connection type

No-mark: Terminal type C: Connector type

Connection outlet specification

M20: M20 thread G1/2: G1/2 thread

Release key type

No-mark: Cross type K: Special type


3 Contact composition

	4-contact	5-contact	6-contact
Α	Lock 1 N.C. / 1 N.O. + Door 1 N.C. / 1 N.O.	Lock 1 N.C. / 1 N.O. + Door N.C. 2 / N.O. 1	Lock 2 N.C. /1 N.O. + Door 2 N.C. /1 N.O.
В	Lock N.C. 2 + Door N.C. 1 / N.O. 1	Lock N.C. 2 + Door N.C. 2 / N.O. 1	Lock N.C. 3 + Door N.C. 2/N.O. 1
С	Lock N.C. 1 / N.O. 1 + Door N.C. 2	Lock N.C. 1 / N.O. 1 + Door N.C. 3	Lock N.C. 2/N.O. 1 + Door N.C. 3
D	Lock N.C. 2 + Door N.C. 2	Lock N.C. 2 + Door N.C. 3	Lock N.C. 3 + Door N.C. 3

Dimensions

■ Panel cut out

• Unit: mm, For the detailed dimensions of the product, follow the Autonics web site.

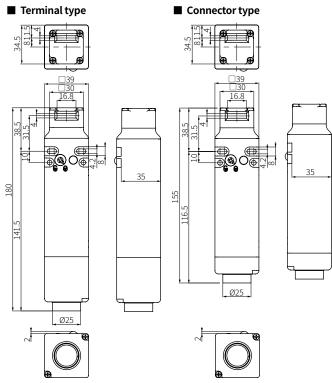

4-M4

Specifications


Model	SFDL-	SFDL-□□□-C□□	
Directing opening force	≥ 80 N		
Directing opening distance	≥ 10 mm		
Locking pullout strength	≥ 1,300 N		
Operating speed	0.05 to 1 m/s		
Operating frequency	≤ 20/min		
Machanical life cycle	≥ 1,000,000 operations (20/min		
Vibration (malfunction)	0.35mm amplitude at frequency of 10 to 55 Hz (for 1 min) in each X, Y, Z direction for 10 min		
Shock	1,000 m/s² (≈ 100 G) in each X, Y, Z direction for 3 times		
Shock (malfunction)	80 m/s² (≈ 8 G) in each X, Y, Z direction for 3 times		
Ambient temperature	-10 to 55°C ⁰¹⁾ , storage: -25 to 65°C (a non freezing or condensation environment)		
Ambient humidity	35 to 85 %RH, storage: 35 to 85 %RH (a non freezing or condensation environment)		
Protection structure	IP67 02 (IEC standard, except for head)		
Material	Head: zinc, case: polyamide 66, operation key: stainless steel 304		
Approval	CE (
Accessory	SFDL- K (Special type release keyse key): rotating key		
Applicable cable	AWG22	-	
Connection type	Terminal type	Connector type	
Unit weight (packaged)	≈ 375 g (≈ 440 g)	≈ 325 g (≈ 395 g)	

- 01) UL approved ambient temperature: 50°C
- $02) \ \ Rated \ protection \ structure \ is for the switch \ body. \ Be \ cautious \ about \ preventing \ the \ head \ part \ from \ entering \ the \ foreign \ about \ preventing \ the \ about \ preventing \ the \ part \ from \ entering \ the \ foreign \ prevention \ preventing \ the \ prevention \ pr$

materials such as dust and water.			
Contact block			
Rated voltage/current for load	Resistive load: 1 A/120 VAC ~, 0.22 A/125 VDC == Inductive load (IEC): AC-15 1 A/120 VAC ~, DC-13 0.22 A/125 VDC == Inductive load (UL): C150, R150		
Impulse dielectric strength	Between the terminals of same polarity: 1.5 kV Between the terminals of different polarity: 1.5 kV Between each terminal and non-live part: 2.5kV		
Insulation resistance	≥ 100 MΩ (500 VDC== megger)		
Contact resistance	\leq 200 m Ω		
Electrical life cycle	≥ 100,000 operations (125 VAC~/1 A)		
Conditional short-circuit current	100 A		
Solenoid			
Rated voltage 24 VDC=-, class 2			
Current consumption	Supplying power: 0.26A Normal: max. 0.2A (approx. 3 seconds after supplying power)		
Insulation class Class E			

Installation

 
- The head of the switch can be rotated by loosening the four screws from the corners of the head and reinstalling the head in the desired orientation.
- Be sure to install the switch with the minimum radius at a hinged door as shown in the table.



Operation	Minimum radius		
key	R1	R2	
SFD-KH	300 mm	300 mm	
SFD-KL	300 mm	300 mm	
SFD-KHR	300 mm	300 mm	
SFD-KLR	300 mm	300 mm	
SFD-KLF	50 mm	300 mm	
SFD-KLF2	50 mm	300 mm	

• Inspect the inserted operation key remains within the set zone (0.5 to 3 mm).

 • Install the operation key within ± 1 mm from the center of the operation key hole.







product

•	Recommended sciew tighterning torque			
	Screw	Tightening torque		
	Terminal screw	0.4 N·m		
	Head mounting screw (M3)	0.7 to 0.9 N·m		
	Cable cover	0.5 to 0.7 N·m		
	Cable gland	27 to 33 N·m		

Thread spec	MFR	Model
G1/2	LAPP	ST-PT1/2 5380-1002
M20	LAPP	ST-M20X1.5 5311-1020

- In case of using the cable gland with the 9 mm screw thread or longer, a gap between the switch and cable may affect the protection structure.
- Do not use metallic duct. Using metallic duct can result in electric shock due to the damage on the service entrance.

Release Key

Release key type	Normal position	Manual unlock position	
Cross type		6 6	
Special type			

- You can manually unlock the switch in the emergency situation such as blackout, when wiring, before supplying power, or when testing operation of the switch.
 When using the release key, turn it to the end completely.
 Otherwise (under 90'), switch can be damaged or malfunction.
 Do not apply the power over 0.2 N m on the release key. It can be result in product damage.


Contact Composition and Operation

Connection diagram represents the locked status with the operation key inserted. (), \square : OFF)

Model	Contact (lock monitor+	Connection diagr		Contact operation	
	door monitor)	Lock monitor	Door monitor		
		9 (E1(+) (E2(-)) 10		Operation key Operation complete key insertion extraction	
			₩		
	1N.C./1N.O.+ 1N.C./1N.O.	242 41	121111	Lock position 42-11	
SFDL- A-		864-463	34-335	34-33	
			6	64-63 Lock position	
SFDL-B-	2N.C.+1N.C./1N.O.	242 41	12 111 1	42-11	
SUPERBURIE			34 335	34-33 62-61	
			12 111 0	Lock position	
SFDL-C-	1N.C./1N.O.+2N.C.			42-11 32-31	
			32 315 0	64-63	
		242 41	12 11 1 😝	Lock position	
SFDL-D-D-	2 N.C.+2 N.C.	8 6 2 + 6 1	32 1 31 5	42-11 32-31	
			55L 2713 🛆	62-61	
	1NC/1NO	242 41	. i	Lock position 42-11	
SFDL-□CA-□□□	1 N.C./1 N.O.+ 1 N.C./1 N.O.		22 ¹	22-21 34-33	
			6	64-63 Lock position	
		242 41	1 i 22 1 1 3 €	42-11	
SFDL-CB-CD-	2 N.C.+1 N.C./1 N.O.	1 8 62 61	34-335	22-21 34-33	
		242 41	6	62-61 Lock position	
SFDL-DCC-DDD	1N.C./1N.O.+2N.C.		22 + 213 😝	42-11 22-21	
			32 ¹ →31 ⁵ →	32-31 64-63	
		242 41	1	Lock position	
SFDL-CD-CD-	2 N.C.+2 N.C.		22 1 21 3 😝	42-11 22-21	
			32 ¹ →31 5 ↔	32-31 62-61	
			12 1111	Lock position 42-11	
SFDL-05A-00	1N.C./1N.O.+ 2N.C./1N.O.		22	22-21 34-33	
		7	6	64-63	
			12 + 11 1 0	Lock position 42-11	
SFDL5B	2N.C.+2N.C./1N.O.	862 61	34 335	22-21 34-33	
		 	6	62-61 Lock position	
SFDL-05C-000	1N.C./1N.O.+3N.C.		12 1 1 1 0 22 1 21 3 0	42-11 22-21	
3, 22, 30	114.0,114.0 514.0.		32 + 315 O	32-31	
		 - - - - - - - - - - - - - - - - - 	12 11 1	64-63 Lock position	
SFDL-05D-000	2N.C.+3 N.C.		22 + 21 3 😝	42-11 22-21	
			32 315 (a)	32-31 62-61	
		242 41	12 11 1 😝	Lock position	
SFDL-06A-00	2 N.C./1 N.O.+ 2 N.C./1 N.O.	1 452 51 63	=!= ~	42-11 52-21	
			6	34-33 64-63	
				Lock position 42-11	
SFDL- GB- GB-	3 N.C.+2 N.C./1 N.O.	452 51 862 61	22 1 21 3 → 34 1 33 5	52-21 34-33	
			6	62-61 Lock position	
	2NC/1NO - 2NC	2 4 2 1 4 1 4 5 2 1 5 1	12 ¹ 11 1 0	42-11	
SFDL- 6C-	2N.C./1N.O.+3N.C.	1 8 6 4 6 3	32 → 31 5 ⊖	52-21 32-31	
		242 41	6 12 11 1 0	64-63 Lock position	
SFDL-06D-00	3N.C.+3N.C.	452 + 51	\equiv \downarrow \equiv \simeq	42-11 52-21	
		862 61	32 + 315 O	32-31 62-61	
	<u>I</u>	<u> </u>	<u> </u>	02-01	

Operation Key (sold separately)

 $\bullet\,$ Unit: mm, For the detailed dimensions of the product, follow the Autonics web site.

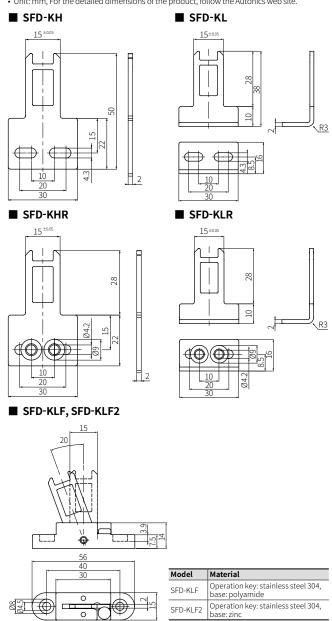

Connector Cable (sold separately)

• Connector cable is the separately sold accessory for the connector type model.

