

Autonics Refrigeration Temperature Controller TC3YF SERIES INSTRUCTION MAUAL



Thank you for choosing our Autonics product. Please read the following safety considerations before use.

Safety Considerations

- Please observe all safety considerations for safe and proper product operation to avoid hazards.
- Safety considerations are categorized as follows.
 - Warning** Failure to follow these instructions may result in serious injury or death.
 - Caution** Failure to follow these instructions may result in personal injury or product damage.
- The symbols used on the product and instruction manual represent the following
 - A symbol represents caution due to special circumstances in which hazards may occur.

Warning

- Fail-safe device must be installed when using the unit with machinery that may cause serious injury or substantial economic loss. (e.g. nuclear power control, medical equipment, ships, vehicles, railways, aircraft, combustion apparatus, safety equipment, crime/disaster prevention devices, etc.) Failure to follow this instruction may result in fire, personal injury, or economic loss.
- Install on a device panel to use. Failure to follow this instruction may result in electric shock or fire.
- Do not connect, repair, or inspect the unit while connected to a power source. Failure to follow this instruction may result in electric shock or fire.
- Check 'Connections' before wiring. Failure to follow this instruction may result in fire.
- Do not disassemble or modify the unit. Failure to follow this instruction may result in electric shock or fire.

Caution

- When connecting the power input and relay output, use AWG 28-12 cable and tighten the terminal screw with a tightening torque of 0.3-0.4N·m. When connecting the sensor input and communication cable with dedicated cable, use AWG 28-16 cable and tighten the terminal screw with a tightening torque of 0.3-0.4N·m. Failure to follow this instruction may result in fire or malfunction due to contact failure.
- Use the unit within the rated specifications. Failure to follow this instruction may result in fire or product damage.
- Use dry cloth to clean the unit, and do not use water or organic solvent. Failure to follow this instruction may result in electric shock or fire.
- Do not use the unit in the place where flammable/explosive/corrosive gas, humidity, direct sunlight, radiant heat, vibration, impact, or salinity may be present. Failure to follow this instruction may result in fire or explosion.
- Keep metal chip, dust, and wire residue from flowing into the unit. Failure to follow this instruction may result in fire or product damage.

Ordering Information


TC	3	Y	F	-	1	4	R
----	---	---	---	---	---	---	---

Control output: R Relay output
Power supply: 1 12-24VDC, 4 100-240VAC 50/60Hz
Control output for refrigeration: 1 Compressor output, 2 Compressor+Defrost output, 3 Compressor+Defrost+Evaporator-fan output
Control mode: F Freezing
Size: Y DIN W72xH36mm
Digits: 3 999 (3 digit)
Item: TC Temperature Controller

Input Type and Temperature Range

Input type	Temperature range (°C)	Temperature range (°F)
Thermistor (5kΩ)	-40.0 to 99.9	-40 to 212
RTD (DPT 100Ω)*1	-99.9 to 99.9	-148 to 212

Connections

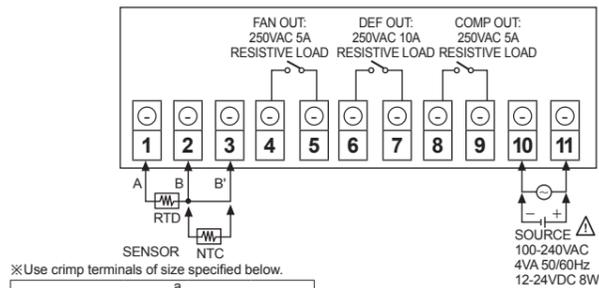


Specifications

Model	TC3YF-1 R	TC3YF-2 R	TC3YF-3 R
Power supply	AC power 100-240VAC~ 50/60Hz DC power 12-24VDC=		
Allowable voltage range	90 to 110% of rated voltage		
Power consumption	AC power Max. 4VA (100-240VAC 50/60Hz) DC power Max. 8W (12-24VDC)		
Display method	7 Segment LED method (red)		
Character size (W×H)	7.4×15.0mm		
Input type	NTC: 5kΩ, RTD*1: DPT 100Ω		
Input line resistance	Allowable line resistance is max. 5Ω per a wire		
Sampling period	500ms		
Display accuracy	• At room temp. (23 ±5°C): (PV ±0.5% or 1°C, select the higher one) rdg ±1digit • Out of room temp. range: (PV ±0.5% or 1°C, select the higher one) rdg ±1°C		
Control output	Defrost (DEF) 250VAC~ 5A 1a Evaporator-fan (FAN) — 250VAC~ 10A 1a	250VAC~ 10A 1a	250VAC~ 5A 1a
Control method	ON/OFF control		
Hysteresis	0.5 to 5.0°C, 2 to 50°F variable		
Relay life cycle	Compressor (COMP)	Mechanical: Min. 20,000,000 operations, Electrical: Min. 50,000 operations (250VAC 5A resistive load)	
	Defrost (DEF)	Mechanical: Min. 20,000,000 operations, Electrical: Min. 100,000 operations (250VAC 10A resistive load)	
	Evaporator-fan (FAN)	Mechanical: Min. 20,000,000 operations, Electrical: Min. 50,000 operations (250VAC 5A resistive load)	
Memory retention	Approx. 10 years (non-volatile memory method)		
Insulation resistance	100MΩ (at 500VDC megger)		
Dielectric strength	2000VAC 60Hz for 1 min (between all external terminals and case)		
Vibration	Mechanical	0.75mm amplitude at frequency of 10 to 55Hz (for 1 min) in each X, Y, Z direction for 2 hours	
	Malfunction	0.5mm amplitude at frequency of 10 to 55Hz (for 1 min) in each X, Y, Z direction for 10 min	
Noise resistance	AC power	Square-wave noise by the noise simulator (pulse width: 1μs) ±2kV R-phase and S-phase	
	DC power	Square-wave noise by the noise simulator (pulse width: 1μs) ±500V R-phase and S-phase	
Environment	Ambient temperature	-10 to 50°C, storage: -20 to 60°C	
	Ambient humidity	35 to 85%RH, storage: 35 to 85%RH	
Protection structure	IP65 (front part, IEC Standards)		
Approval	AC power	UL, VDE (except RTD option models)	
	DC power	—	
Weight*2	Approx. 229g (Approx. 143g)		



- *1: RTD input type is option.
- *2: The weight includes packaging. The weight in parentheses is for unit only. The weight may be varied by model specification and option.
- *Environment resistance is rated at no freezing or condensation.

Part Description

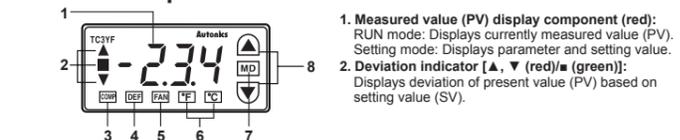


- Compressor (COMP) output indicator: Turns ON for compressor output. Flashes for protection operation, not compressor output.
- Defrost (DEF) output indicator: Turns ON for defrost output. Flashes for defrost delay operation.
- Evaporator-fan (FAN) output indicator: Turns ON for evaporator-fan output. Flashes for delay operation of evaporator-fan output.
- Unit indicator (°C, °F): Displays temperature unit.
- MD key: Used for entering parameter setting group, returning RUN mode, moving parameter or saving SV.
- ▲, ▼ key: Used for changing SV of parameter setting. Hold the ▲ key for 3 sec in RUN mode to execute/stop manual defrost.

Dimensions

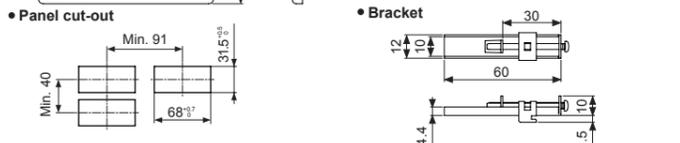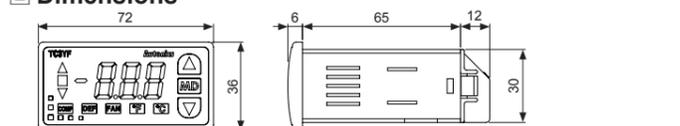


SV Setting

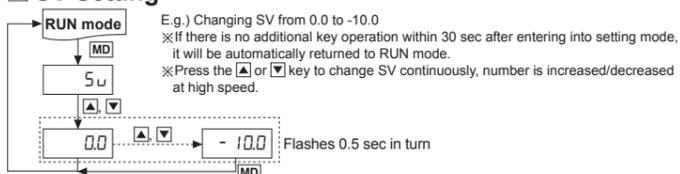


Factory Default

SV Setting			
Parameter	Default		
Su	0.0		
Parameter 1 group			
Parameter	Default	Parameter	Default
HYS	1.0	LnB	0.0
dIn	4	LSu	4.00
dEt	30	HSu	9.99
LbR	0		
Parameter 2 group			
Parameter	Default	Parameter	Default
SdL	0.20	CLt	0
oNt	0.20	dUt	50
dRt	1.00	UnT	0°C
FRn	EF 1	LoC	oFF

Parameter Group

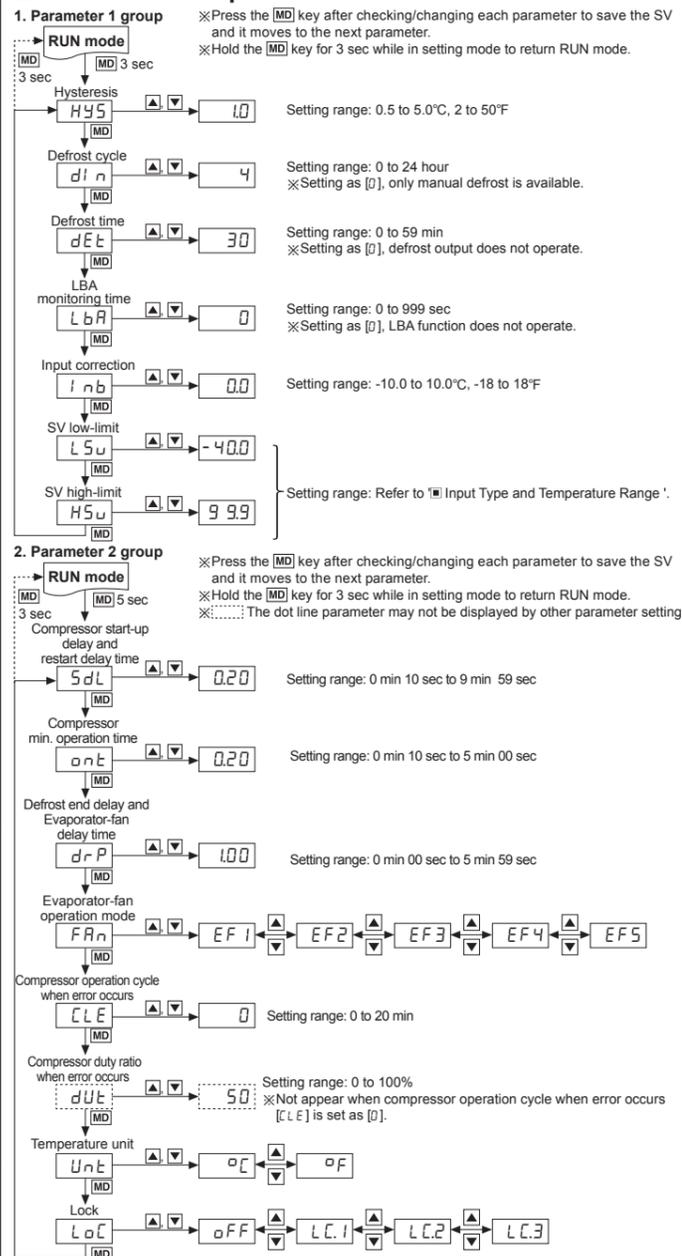


Functions

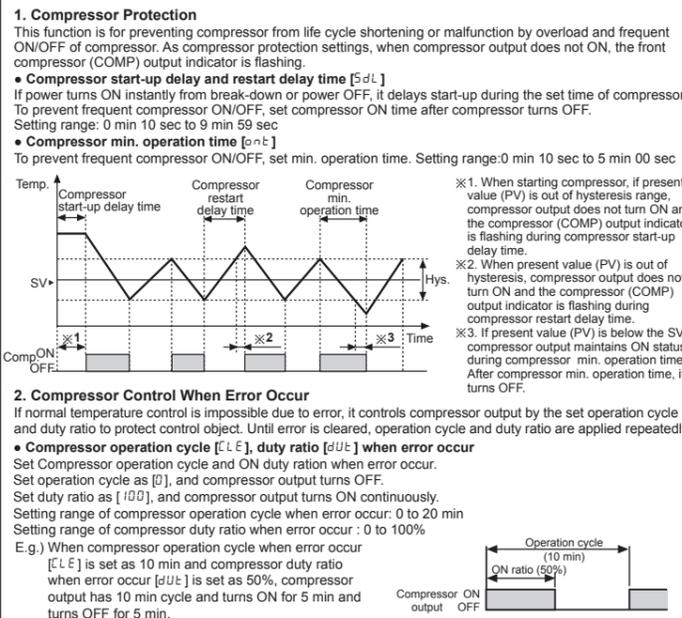

3. Defrost Control

When operating a compressor for a long time, an evaporator and a freezer are freezing and thermal efficiency of compressor is decreased. For increasing thermal efficiency, defrost operation helps to remove frost or ice amount of evaporator. Set defrost cycle, time, etc. to operate defrost (heater defrost). The front defrost (DEF) output indicator turns ON during defrost output and it flashes during defrost delay operation.

- Defrost cycle [dIn], Defrost time [dEt]: Set defrost cycle and time to operate defrost at every set cycle and during the set time. Set defrost cycle as [0], only manual defrost is available. Setting range of defrost cycle: 0 to 24 hour Defrost time Setting range: 0 to 59 min
- Manual defrost: Execute defrost manually regardless of the set defrost cycle. Hold the ▲ key for 3 sec to operate defrost during the set defrost time. When defrost output turns ON, operating compressor output, Evaporator-fan output turn OFF. Hold the ▼ key for 3 sec during manual defrost, applied manual defrost is complete and pre-set defrost cycle restarts.
- Defrost end delay and Evaporator-fan start-up delay time [dRt]: Defrost end delay time and Evaporator-fan start-up delay time operate individually by one setting. Setting range: 0 min 00 sec to 5 min 59 sec
- Defrost end delay time: During defrost operation, drops may exist at evaporator. Set the time to drain remained drops after completing defrost.
- Evaporator-fan start-up delay time: If evaporator temperature is increased by defrost operation, warm air may flow into cooling system by Evaporator-fan operation. Set Evaporator-fan start-up delay time to prevent warm air inflow, and it may increase cooling efficiency.

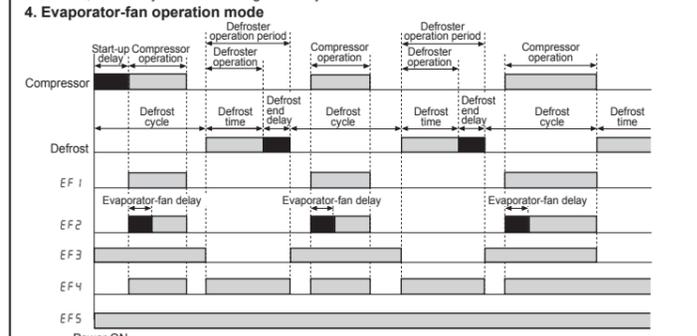

Power ON
*Output does not turn ON but the dedicated indicator flashes at the delay period (compressor, defrost, evaporator-fan).

Parameter	Operation method
EF 1	When compressor operates, evaporator-fan also operates. When compressor operation is finished, evaporator-fan also operation turns OFF.
EF 2	When compressor operates, evaporator-fan operates after the set evaporator-fan start-up delay time. When compressor operation is finished, evaporator-fan operation turns OFF. (regardless of defroster operation)
EF 3	When power turns ON, evaporator-fan operates. When defroster operates, evaporator-fan stops. (regardless of compressor operation)
EF 4	Evaporator-fan operates only when operating compressor or defrost. Evaporator-fan stops when compressor and defroster stops. (for above zero temperature control)
EF 5	Evaporator-fan operates from power ON to power OFF. (regardless of compressor, defroster operation)

5. Loop Break Alarm (LBA) [LbR]

When freezer temperature is not changed over 1.0 (2°F) during set LBA monitoring time [LbR] of parameter 1 group, it regards as abnormal compressor and it displays error. (Err → LbR, flashings in turn) When error occur, compressor is controlled according to the set compressor operation cycle [CLt] and duty ratio [dUt] when error occur. Check the compressor and hold the ▲/▼ keys for 3 sec and error clears and it operates normally. Setting range: 0 to 999 sec (Setting as [0], LBA function does not operate)

6. Lock

For preventing changing SV and parameters of each parameter group.

Display	Description
oFF	Unlock
LC.1	Parameter 2 group
LC.2	Locks parameter 1, 2 groups
LC.3	Locks parameter 1, 2 groups, SV setting

7. Error Display

Flashing in turn	Description	Troubleshooting
Err → oPn	When input sensor is break or sensor is disconnected.	Check input sensor status.
Err → HHH	If the measured temperature is higher than high-limit temperature among temperature setting range.	It clears when input is within the display range.
Err → LLL	If the measured temperature is lower than low-limit temperature among temperature setting range.	It clears when input is within the display range.
Err → LbR	Even though input sensor is normal, freezer temperature does not change over 1.0°C (2°F) during LBA monitoring time [LbR].	Check the compressor and hold the ▲/▼ key at the same time for 3 sec. It clears when input is within the adequate range.

Cautions during Use

- Follow instructions in 'Cautions during Use'. Otherwise, it may cause unexpected accidents.
- Check the polarity of the terminals before wiring the temperature sensor. For RTD temperature sensor, wire it as 3-wire type, using cables in same thickness and length. For thermocouple (CT) temperature sensor, use the designated compensation wire for extending wire.
- Keep away from high voltage lines or power lines to prevent inductive noise. In case installing power line and input signal line closely, use line filter or varistor at power line and shielded wire at input signal line. Do not use near the equipment which generates strong magnetic force or high frequency noise.
- Install a power switch or circuit breaker in the easily accessible place for supplying or disconnecting the power.
- Do not use the unit for other purpose (e.g. voltmeter, ammeter), but temperature controller.
- 12-24VDC power supply should be insulated and limited voltage/current or Class 2, SELV power supply device.
- Make a required space around the unit for radiation of heat. For accurate temperature measurement, warm up the unit over 20 min after turning on the power.
- Install a surge absorber at each end of inductive load coil when controlling high-capacity power relay or inductive load (e.g. magnet).
- Make sure that power supply voltage reaches to the rated voltage within 2 sec after supplying power.
- Do not wire to terminals which are not used.
- This unit may be used in the following environments.
 - Indoors (in the environment condition rated in 'Specifications')
 - Altitude max. 2,000m
 - Pollution degree 2
 - Installation category II

Major Products

- Photoelectric Sensors
 - Fiber Optic Sensors
 - Door Sensors
 - Door Side Sensors
 - Area Sensors
 - Proximity Sensors
 - Pressure Sensors
 - Rotary Encoders
 - Connector/Sockets
 - Switching Mode Power Supplies
 - Control Switches/Lamps/Buzzers
 - I/O Terminal Blocks & Cables
 - Stepper Motors/Drivers/Motion Controllers
 - Graphic/Logic Panels
 - Field Network Devices
 - Laser Marking System (Fiber, Co., Nd: YAG)
 - Laser Welding/Cutting System
 - Temperature Controllers
 - Temperature/Humidity Transducers
 - SSRs/Power Controllers
 - Counters
 - Timers
 - Panel Meters
 - Tachometer/Pulse (Rate) Meters
 - Display Units
 - Sensor Controllers
- HEADQUARTERS:
18, Banson-ro 513beon-gil, Haundae-gu, Busan, South Korea, 48002
TEL: 82-51-519-2322
E-mail: sales@autonics.com