

# Autonics Dual PID Control Temperature Controller TZ SERIES

## INSTRUCTION MANUAL



Thank you for choosing our Autonics product.  
Please read the following safety considerations before use.

### ■ Safety Considerations

- ※Please observe all safety considerations for safe and proper product operation to avoid hazards.
- ※Safety considerations are categorized as follows.
- Warning** Failure to follow these instructions may result in serious injury or death.
- Caution** Failure to follow these instructions may result in personal injury or product damage.
- ※The symbols used on the product and instruction manual represent the following
- ▲ symbol represents caution due to special circumstances in which hazards may occur.

### ▲ Warning

- Fail-safe device must be installed when using the unit with machinery that may cause serious injury or substantial economic loss.** (e.g. nuclear power control, medical equipment, ships, vehicles, railways, aircraft, combustion apparatus, safety equipment, crime/disaster prevention devices, etc.) Failure to follow this instruction may result in fire, personal injury, or economic loss.
- Install on a device panel to use.** Failure to follow this instruction may result in electric shock.
- Do not connect, repair, or inspect the unit while connected to a power source.** Failure to follow this instruction may result in electric shock or fire.
- Check 'Connections' before wiring.** Failure to follow this instruction may result in fire.
- Do not disassemble or modify the unit.** Failure to follow this instruction may result in electric shock or fire.

### ▲ Caution

- When connecting the power input and relay output, use AWG 20(0.50mm<sup>2</sup>) cable or over and tighten the terminal screw with a tightening torque of 1.0N·m.**  
When connecting the sensor input and communication cable without dedicated cable, use AWG 28-16 cable or over and tighten the terminal screw with a tightening torque of 1.0N·m.  
Failure to follow this instruction may result in fire or malfunction due to contact failure.
- Use the unit within the rated specifications.** Failure to follow this instruction may result in fire or product damage.
- Use dry cloth to clean the unit, and do not use water or organic solvent.** Failure to follow this instruction may result in electric shock or fire.
- Do not use the unit in the place where flammable/explosive/corrosive gas, humidity, direct sunlight, radiant heat, vibration, impact, or salinity may be present.** Failure to follow this instruction may result in fire or explosion.
- Keep metal chip, dust, and wire residue from flowing into the unit.** Failure to follow this instruction may result in fire or product damage.

### ■ Ordering Information

TZ	4	SP	-	1	4	R
Control output						
R Relay output						
S SSR drive output						
C Current output						
Power supply						
4 100-240VAC 50/60Hz						
Option output						
1 <sup>※1, ※2</sup> Event 1						
2 <sup>※2</sup> Event 1 + Event 2						
R <sup>※2</sup> Event 1 + PV transmission (DC4-20mA)						
T Event 1 + RS485 communication						
A Event 1 + Event 2 + PV transmission (DC4-20mA)						
B Event 1 + Event 2 + RS485 communication						
Size						
SP DIN W48×H48mm (plug type) <sup>※3</sup>						
ST DIN W48×H48mm (terminal block type)						
M DIN W72×H72mm						
W DIN W96×H48mm						
H DIN W48×H96mm						
L DIN W96×H96mm						
Digit						
4 9999 (4-digit)						
Item						
TZ Temperature controller						

- ※The unit cannot be configured with any random combination from the above ordering information. Please refer to Specifications for possible configurations.
- ※1: TZ4SP only supports Event 1 option output.
- ※2: TZ4ST only supports Event 1, Event 1 + Event 2, and Event 1 + PV transmission (DC4-20mA) option output.
- ※3: 11-pin sockets (PG-11, PS-11(N)) are sold separately.
- ※The above specifications are subject to change and some model may be discontinued without notice.
- ※Be sure to follow cautions written in the instruction manual and the technical descriptions (catalog, homepage).

### ■ Specifications

Series	TZ4SP	TZ4ST	TZ4M	TZ4W	TZ4H	TZ4L
Power supply	100-240VAC~50/60Hz					
Allowable voltage range	90 to 110% of rated power voltage					
Power consumption	Max. 5VA (100-240VAC 50/60Hz) Max. 6VA (100-240VAC 50/60Hz)					
Display method	7-segment LED (PV: red, SV: green)					
Character size	PV (W×H) SV (W×H)	4.8×7.8mm	9.8×14.2mm 8.0×10.0mm	8.0×10.0mm	3.8×7.6mm	9.8×14.2mm 8.0×10.0mm
Input type	RTD	DPT100Ω, JPT100Ω, 3-wire (allowed resistance: max. 5Ω per line)				
	TC	K (CA), J (IC), R (PR), E (CR), T (CC), S (PR), N (NN), W (TT)				
	Analog	1-5VDC~, 0-10VDC~, DC4-20mA				
Display accuracy	F.S. ±0.3% or 3°C, greater value					
Control output	Relay	250VAC~3A 1c				
	SSR	Max. 12VDC±3V 30mA				
	Current	DC4-20mA (load resistance max. 600Ω)				
	EVENT1	250VAC~1A 1a				
Option output	EVENT2	— 250VAC~1A 1a				
	PV transmission	— DC4-20mA (load resistance max. 600Ω)				
	Communication	— RS485 communication				
Control method	ON/OFF, P, PI, PD, PIDF, PID control					
Alarm output hysteresis	1 to 100°C (0.1 to 100.0°C) variable					
Proportional band (P)	0.0 to 100.0%					
Integral time (I)	0 to 3,600 sec					
Derivative time (D)	0 to 3,600 sec					
Control period (T)	1 to 120 sec					
Sampling period	0.5 sec					
LBA setting	1 to 999 sec					
Ramp setting	Ramp Up, Ramp Down: 1 to 99 min each					
Dielectric strength	2,000VAC 50/60Hz for 1 min (between input and power terminals)					
Vibration	Mechanical	0.75mm amplitude at frequency 10 to 55Hz (for 1 min) in each X, Y, Z direction for 2 hours				
	Electrical	0.5mm amplitude at frequency 10 to 55Hz (for 1 min) in each X, Y, Z direction for 10 min				
Relay life cycle	Control output	Mechanical: min. 10,000,000 operations, Electrical: min. 100,000 operations (250VAC 3A resistance load)				
	Option output	Mechanical: min. 20,000,000 operations, Electrical: min. 500,000 operations (250VAC 1A resistance load)				
Insulation resistance	Over 100MΩ (at 500VDC megger)					
Noise immunity	Square shaped noise by noise simulator (pulse width 1μs) ±2kV R-phase, S-phase					
Memory retention	Approx. 10 years (non-volatile semiconductor memory type)					
Environment	Ambient temp.	-10 to 50°C, storage: -20 to 60°C				
	Ambient humi.	35 to 85%RH, storage: 35 to 85%RH				
Approval	CE, cRU, US					
Weight <sup>※1</sup>	Approx. 205g (approx. 144g)	Approx. 218g (approx. 162g)	Approx. 360g (approx. 228g)	Approx. 365g (approx. 246g)	Approx. 474g (approx. 304g)	Approx. 474g (approx. 304g)

※1: The weight includes packaging. The weight in parenthesis is for unit only.  
※ Environment resistance is rated at no freezing or condensation.

### ■ Input Type and Range


Input type	Decimal point	Display	Input range (°C)	Input range (°F)	
Thermo couple	K (CA)	1	ECRH	-100 to 1300	-148 to 2372
	K (CA)	0.1	ECRL	-100.0 to 999.9	Not supported
	J (IC)	1	JICH	0 to 800	32 to 1472
	J (IC)	0.1	JICL	0.0 to 800.0	Not supported
	R (PR)	1	rPr	0 to 1700	32 to 3092
	E (CR)	1	ECrH	0 to 800	32 to 1472
	E (CR)	0.1	ECrL	0.0 to 800.0	Not supported
	T (CC)	1	tCC	-200 to 400	-328 to 752
	T (CC)	0.1	tCCL	-199.9 to 400.0	Not supported
	S (PR)	1	SPr	0 to 1700	32 to 3092
RTD	JPT100Ω	0.1	JPEH	-199.9 to 199.9	-199.9 to 391.8
	DPT100Ω	1	dPEH	0 to 500	32 to 932
	DPT100Ω	0.1	dPEL	-199.9 to 199.9	-199.9 to 391.8
	Analog	Voltage	0 - 10VDC	A--1	-1999 to 9999
	1 - 5VDC	A--2	(display range will vary depending on the decimal point.)		
	Current	DC4 - 20mA	A--3		

### ■ Configuring Input Type

Please configure the internal switches before supplying power. After supplying power, configure the input type [n-t] in parameter group 2 according to the input type.

Input type	S/W 1	S/W 2
Thermocouple		
RTD	1 1	m A V
Analog	Voltage (0-10VDC, 1-5VDC)	2 2
	Current (DC4-20mA)	2 2

- Detaching the case  
Press the front case then pull the case to detach the case from the body. Configure the internal switches as input type.

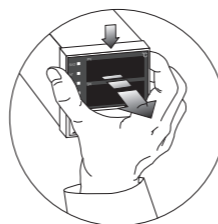

### ■ Dimensions

(unit: mm)

• TZ4SP

• TZ4ST

• TZ4M

• TZ4W

• TZ4L

• TZ4H

• Panel cut-out dimensions

Size	A	B	C	D
TZ4SP	Min. 55	Min. 62	45.5 <sup>±0.5</sup>	45.5 <sup>±0.5</sup>
TZ4ST	Min. 55	Min. 62	45.5 <sup>±0.5</sup>	45.5 <sup>±0.5</sup>
TZ4M	Min. 74	Min. 91	68.5 <sup>±0.5</sup>	68.5 <sup>±0.5</sup>
TZ4W	Min. 112	Min. 50	92 <sup>±0.4</sup>	45.5 <sup>±0.5</sup>
TZ4H	Min. 50	Min. 102	45 <sup>±0.4</sup>	92 <sup>±0.4</sup>
TZ4L	Min. 98	Min. 106	91 <sup>±0.4</sup>	91 <sup>±0.4</sup>

• Bracket

• TZ4ST, TZ4SP Series

• TZ4L, TZ4M, TZ4H, TZ4W Series

### ■ Connections

※Use terminals of size specified below.

Terminal	Round	Forked
a	Min. 3.5mm	Min. 3.5mm
b	Max. 7.2mm	Max. 7.2mm

• TZ4SP










• TZ4ST

• TZ4M

• TZ4W

• TZ4H

• TZ4L

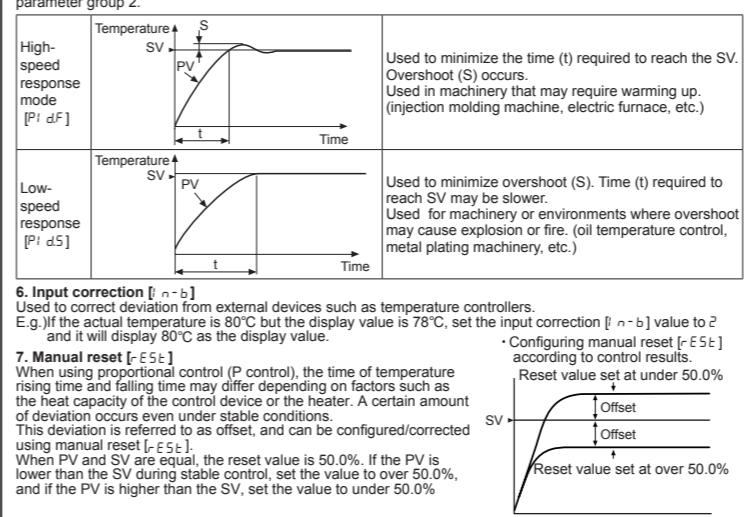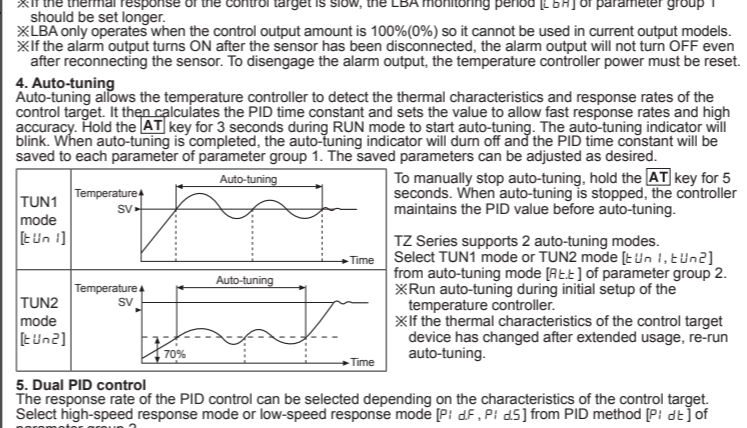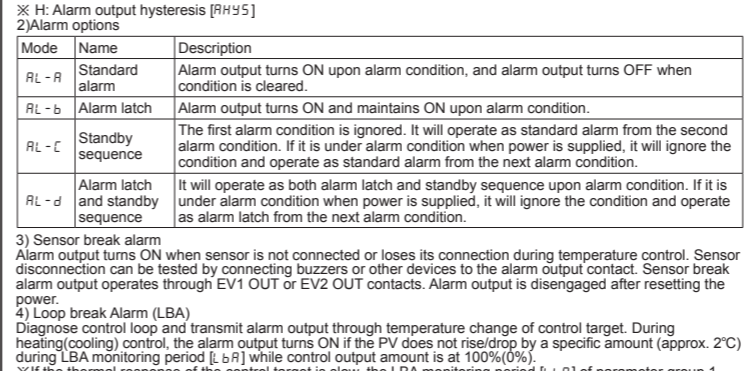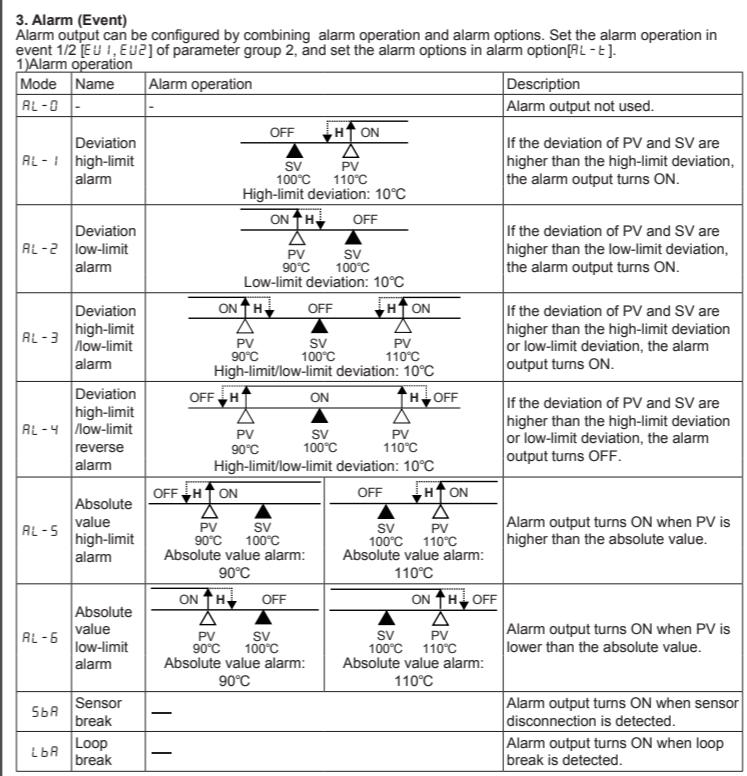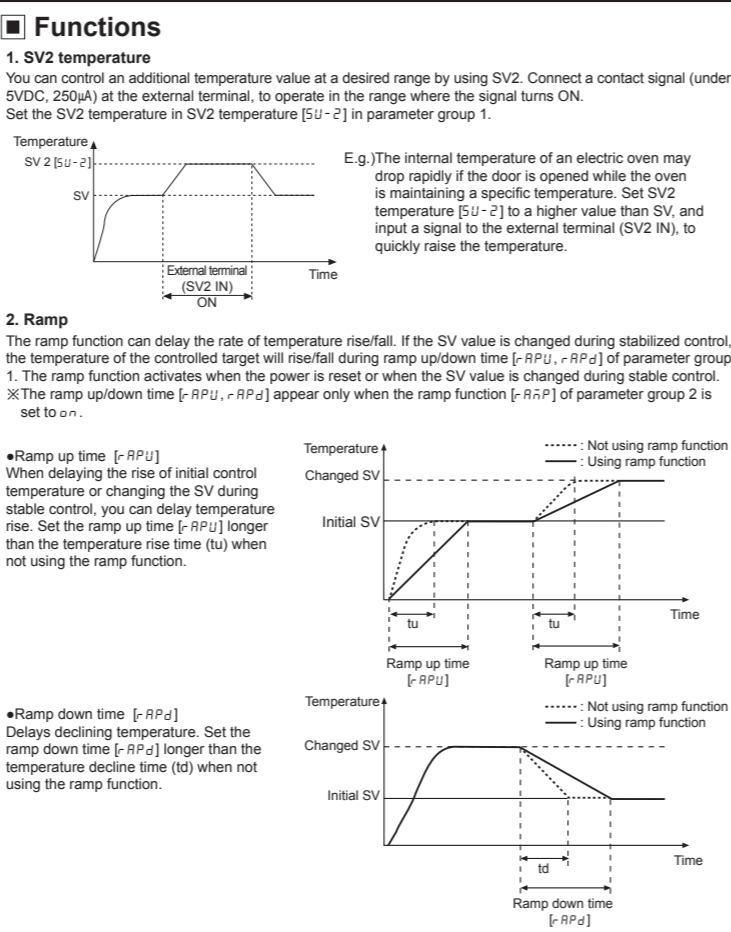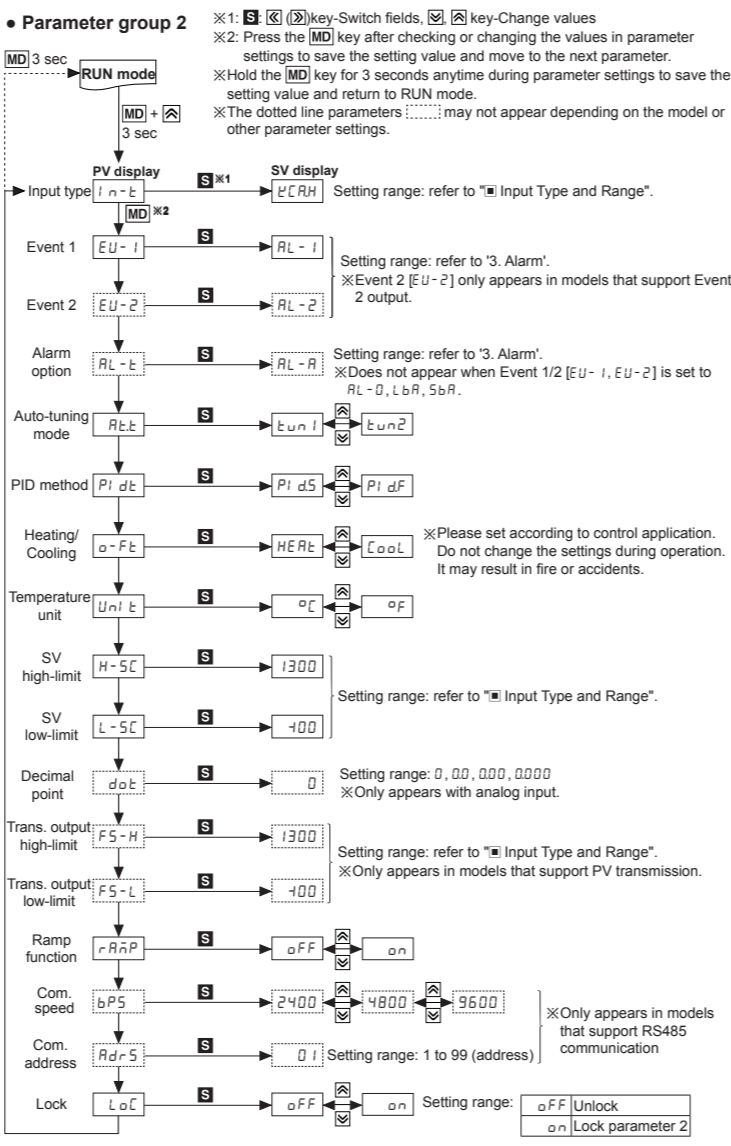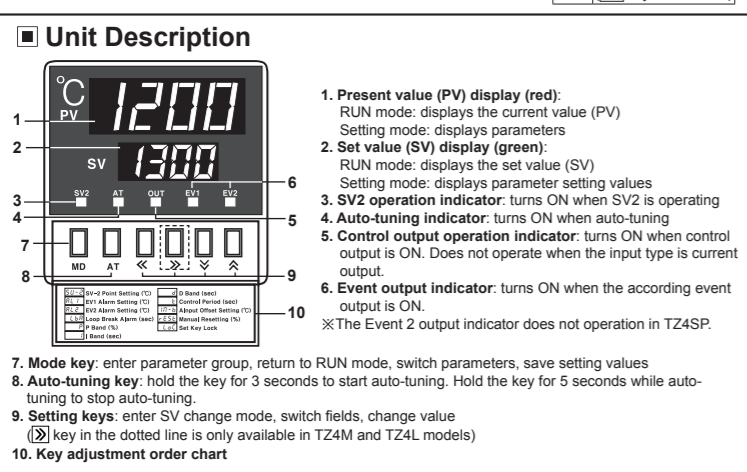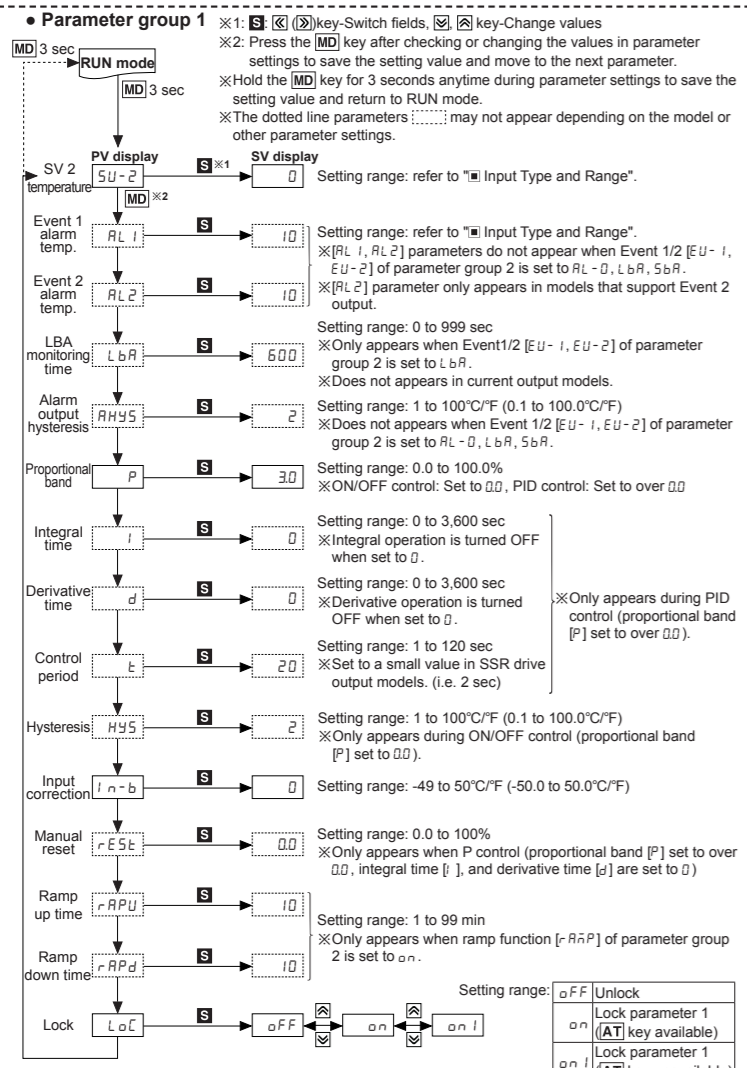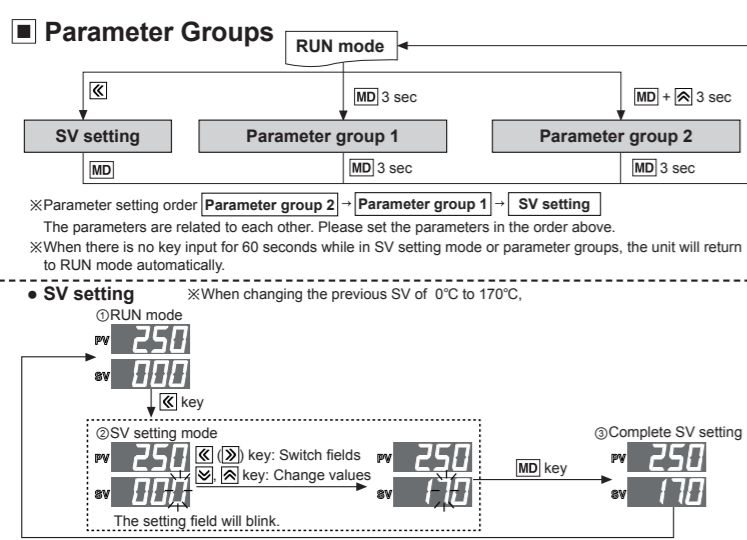

### RS485 Communication

Applicable for models that support RS485 communication. Please refer to 'Ordering Information'. It is used to transmit PV or SV, and/or set the SV.

Protocol	BCC	Communication speed	2400, 4800, 9600bps
Applied standard	EIA RS485	Start bit	1-bit fixed
Max. connections	31 units (address: 1 to 99)	Data bit	8-bit fixed
Communication method	2-wire half duplex	Parity bit	None
Synchronization method	Asynchronous	Stop bit	1-bit fixed
Communication distance	Within 1.2km		

### Comprehensive Device Management Program[DAQMaster]

DAQMaster is a comprehensive device management software for setting parameters and monitoring processes. DAQMaster can be downloaded from our website at [www.autonics.com](http://www.autonics.com).

Item	Minimum specifications
System	IBM PC compatible computer with Pentium III or above
Operations	Windows 98/NT/XP/Vista/7/8/10
Memory	256MB+
Hard disk	1GB+ of available hard disk space
VGA	Resolution: 1024×768 or higher
Others	RS232C serial port (9-pin), USB port

### Troubleshooting

Symptoms	Troubleshooting
oPE n is displayed on the PV display during operation	Disconnect the power and check the input connection. If the input is connected, disconnect the input wiring from the temperature controller and short the + and - terminals. Power the temperature controller and check if it displays the room temperature. If it does not display the room temperature and continues to display oPE n, the controller is broken. Please contact our technical support. (Input type is thermocouple)
Load (heater, etc.) does not operate during operation	Check the state of the control output indicator on the front panel. If the indicator is not working, check parameter settings. If the indicator is working, disconnect the wiring from the output terminal of the temperature controller and check the output (replay contact, SSR drive, current)
Err d (error) is displayed on the PV display during operation	Indicates damage to internal chip by strong noise (2kVAC). Please contact our technical support. Locate the source of the noise and devise countermeasures.

### Error Display

Display	Description	Troubleshooting
oPE n	Blinks when input is disconnected.	Check input status.
HHHH	Blinks when the measured input value is higher than the temperature range.	Adjust the value to within the temperature range.
LLLL	Blinks when the measured input value is lower than the temperature range.	

### Factory Default

#### Parameter group 1

Parameter	Default	Parameter	Default	Parameter	Default
SV-2	0	P	30	In-b	0
RL-1	10	i	0	rESt	00
RL-2	10	d	0	rAPU	10
LbA	600	t	20	rAPd	10
RHYS	2	HYS	2	LoC	oFF

#### Parameter group 2

Parameter	Default	Parameter	Default	Parameter	Default
In-t	ECRH	o-Ft	HEAt	F5-L	+00
EU-1	RL-1	Un-t	oC	rANP	oFF
EU-2	RL-2	H-5C	1300	bP5	2400
RL-L	RL-A	L-5C	+00	Rd-5	01
At-t	tUn1	do-t	0	LoC	oFF
Pi-dL	Pi-d5	F5-H	1300		

- ### Cautions during Use
- Follow instructions in 'Cautions during Use'. Otherwise, it may cause unexpected accidents.
  - Check the polarity of the terminals before wiring the temperature sensor.
  - For RTD temperature sensor, wire it as 3-wire type, using cables in same thickness and length. For thermocouple (CT) temperature sensor, use the designated compensation wire for extending wire.
  - Keep away from high voltage lines or power lines to prevent inductive noise. In case installing power line and input signal line closely, use line filter or varistor at power line and shielded wire at input signal line.
  - Do not use near the equipment which generates strong magnetic force or high frequency noise.
  - Install a power switch or circuit breaker in the easily accessible place for supplying or disconnecting the power.
  - Do not use the unit for other purpose (e.g. voltmeter, ammeter), but temperature controller.
  - When changing the input sensor, turn off the power first before changing. After changing the input sensor, specify internal switch and modify the value of the corresponding parameter.
  - Do not overlapping communication line and power line.
  - Use twisted pair wire for communication line and connect ferrite bead at each end of line to reduce the effect of external noise.
  - Make a required space around the unit for radiation of heat.
  - For accurate temperature measurement, warm up the unit over 20 min after turning on the power.
  - Make sure that power supply voltage reaches to the rated voltage within 2 sec after supplying power.
  - Do not wire to terminals which are not used.
  - This unit may be used in the following environments.
    - Indoors (in the environment condition rated in 'Specifications')
    - Altitude max. 2,000m
    - Pollution degree 2
    - Installation category II

### Major Products

<ul style="list-style-type: none"> <li>Photoelectric Sensors</li> <li>Fiber Optic Sensors</li> <li>Door Sensors</li> <li>Door Side Sensors</li> <li>Area Sensors</li> <li>Proximity Sensors</li> <li>Pressure Sensors</li> <li>Rotary Encoders</li> <li>Connector/Sockets</li> <li>Switching Mode Power Supplies</li> <li>Control Switches/Lamps/Buzzers</li> <li>I/O Terminal Blocks &amp; Cables</li> <li>Stepper Motors/Drivers/Motion Controllers</li> <li>Graphic/Logic Panels</li> <li>Field Network Devices</li> <li>Laser Marking System (Fiber, CO<sub>2</sub>, Nd: YAG)</li> <li>Laser Welding/Cutting System</li> </ul>	<ul style="list-style-type: none"> <li>Temperature Controllers</li> <li>Temperature/Humidity Transducers</li> <li>SSRs/Power Controllers</li> <li>Counters</li> <li>Timers</li> <li>Panel Meters</li> <li>Tachometer/Pulse (Rate) Meters</li> <li>Display Units</li> <li>Sensor Controllers</li> </ul>
--	--

**Autonics Corporation**  
<http://www.autonics.com>

HEADQUARTERS:  
 18, Bansong-ro 513beon-gil, Haeundae-gu, Busan, South Korea, 48002  
 TEL: 82-51-519-3232  
 E-mail: [sales@autonics.com](mailto:sales@autonics.com)

DRW170713AA