2-axis High Speed Interpolation/Normal Motion Controller Features

- Independent 2-axis controlling with high operating speed of max. 4Mpps
- Linear/Circular interpolation control (PMC-2HSP)
- Realizing a wide variety of operation up to 200 steps using 17 control commands combination (13 commands except arc/linear interpolation command for PMC-2HSN series)
- Various control interface available (USB, RS232C, RS485, Parallel I/F)
- Controlling up to 32 axes (16-unit) via RS485 serial communication (Modbus RTU)
- 4 operation modes: Jog, Continuous, Index, Program mode
- Symmetrical/asymmetrical trapezoid, S-shaped de/acceleration driving function

Please read "Safety Considerations" in operation manual before using.

User Manual

- Please refer to user manual for detailed instructions and specifications.
- Visit our web site (www.autonics.com) to download user manual and software [atMotion].
- User manual describes installing software, setting parameter and program, operation mode, and multi- axis operation, etc. to operate motion controller.

(except for PMC-2HSD-485)

 \mathbb{S}

Software (atMotion)

atMotion is the windows software designed to operate motion control for motion device.

- Compatible with Microsoft Windows 98, NT, XP (32-bit, 64-bit), Vista (32-bit, 64-bit), 7 (32-bit, 64-bit), 8 (32-bit, 64-bit) and 10 (32-bit, 64-bit)
- Supports 1200, 2400, 4800, 9600, 19200, 38400, 57600, 115200 bps communication speeds
- Available to use on all OS supported COM ports (COM1 to COM256)
- Multilingual support (korean, english)
- Provides the calculator for convenience (calculates PPS, center of interpolation, end coordinates)

PMC –	2HSP – USB	
	Communication type	USB USB / RS232C
		485 RS485 / RS232C
	Axis/Type	2HSP 2-axis high speed interpolation
		2HSN 2-axis high speed normal
Item		PMC Programmable Motion Controller

Specifications

Ordering Information

Model		PMC-2HSP-USB	PMC-2HSP-485	PMC-2HSN-USB	PMC-2HSN-485			
Control a	axis	2-axis	·		÷			
Motor for control		Pulse string input stepp	Pulse string input stepper motor or servo motor					
Power su	upply	24VDC==						
Allowable	e voltage range	90 to 110% of rated volt	age					
Power co	onsumption	Max. 6W						
Inpositio	n range	-8,388,608 to 8,388,607	(selectable absolute/rela	tive value, available pulse-	scaling function)			
Range fo	or the drive speed	1pps to 4Mpps (1 to 8,0	00pps×Magnification 1 to	500)				
Pulse ou	tput mode	1 Pulse/2 Pulse output ((line driver output)					
Operatio	n mode	Jog / Continuous / Index	x / Program					
Index ste	p numbers	64 steps per each axis						
	Step	200 steps						
Program	Control	ABS, INC, HOM, LID ^{*1} , CID ^{*1} , FID ^{*1} , RID ^{*1} , TIM, JMP, REP, RPE, ICJ, IRD, OPC, OPT, NOP, END						
function	Start	Power On program auto-start function						
	Home search	Power On home search	auto-start function					
Home search mode		High speed near home search (step 1) \rightarrow Low speed home search (step 2) \rightarrow Encoder Z phase search (step 3) \rightarrow Offset move (step 4)						
I/O		 Parallel I/F (CN3): 13 inputs, 4 outputs X-axis (CN4) / Y-axis (CN5): 8 inputs, 6 outputs (general-purpose I/O, two of each) 						
Environ	Ambient temperature	0 to 45°C, storage: -15 to 70°C						
-ment	Ambient humidity	20 to 90%RH, storage:	20 to 90%RH, storage: 20 to 90%RH					
Accessory		[Common] Power connector, I/O connector: 3 (PI/F, X-axis, Y-axis), RS232C communication cable (1.5m): 1 [USB type] USB communication cable 1m: 1 •[RS485 type] RS485 connector: 1						
Approval		CE 🕼	CE	CE 🕼	CE			
Weight ^{**2}		Approx. 344g (approx. 101.5g)	Approx. 308.7g (approx. 101.6g)	Approx. 344g (approx. 101.5g)	Approx. 308.7g (approx. 101.6g)			

Environment resistance is rated at no freezing of condensation



PMC-2HS-USB PMC-2HS-485

Q-58

2-axis High Speed Interpolation/Normal Motion Controller

Standard Ope There are three methods t						(A) Photoelectric Sensors
Connect a PC and the controller with communication cable and fun dedicated program (alwotion).					(B) Fiber Optic Sensors	
 Operation by serial com Using serial communica 	munication (de	edicated communic			er.	(C) Door/Area Sensors
Program Com	mands					(D)
Command type	Code	Description				Proximity Sensors
	ABS	Move absolute posit	tion			
	INC	Move relative position			(E) Pressure	
	НОМ	Home search			Sensors	
Drive commands	LID ^{*1}	2-axis linear interpolation			(F)	
	CID ^{**1}	2-axis CW circular ir	nterpolation	1		Rotary Encoders
	FID ^{*1}	2-axis CW arc interp	olation			
	RID ^{**1}	2-axis CCW arc inte	rpolation			(G) Connectors/ Connector Cables/
	ICJ	Jump input condition	n			Sensor Distribution Boxes/Sockets
I/O commands	IRD	Stand-by external in	put			20.007000R813
io commanus	OPC	ON/OFF output port				(H) Temperature
	OPT	ON pulse from output	ut port			Controllers
	JMP	Jump				(1)
Program control commands	REP	Start repetition				SSRs / Power Controllers
rogram control commands	RPE	End repetition				
	END	End program			(J)	
Others	TIM	Timer				Counters
%1: These commands are onl	NOP	No operation				(K)
Unit Description PMC-2HS-USB		2HS-485	Used to	•	er, communication status of the	(L) Panel Meters (M) Tacho /
controller, and operation status of each axis. controller, and operation status of each axis. C controller, and operation status of each axis. C Power connector terminal Used to connect RS232 serial (RJ12-DSUB9) connection cable USB/RS485 connector terminal Used to connect USB and RS485 connection cable 5. External //O connector terminal				(N) (N) Units (O) Sensor		
	6 + IDS		Used to Paralle 6. ID sele	el I/F, X, Y ect switch	tor terminal bus drives through input and output of D for each node in case of RS485	Controllers (P) Switching Mode Power Supplies (Q) Stepper Motors
			commu	unication		Stepper Motors & Drivers & Controllers
External I/O Te	erminal C	connection				(R)
◎ PMC-2HS□-USB		-2HS485				Graphic/ Logic Panels
CE Autonics	(e)	Autonics		Connect	or	(S) Field
	· · F	Automics		Connector no.	Description	Network Devices
	CN2	IIII CN6				
		R5486 • 424VDC • 1 GND		CN1	Power connector	(T) Software
				CN2	RS232C connector	
				CN3	Parallel I/F connector	
	012			CN4	X-axis I/O connector	
	CN3			CN5	Y-axis I/O connector	
E. E. CN5				010	PMC-2HSP/2HSN-USB: USB connector	
	IDS			CN6	PMC-2HSP/2HSN-485: RS485 connector	1
	IDS	۵ 🗀 🛛		IDS	ID selection switch	
	لہا]
		<u> </u>				_
		A	utonics		Q-{	59

Power Connector (CN1)

Pin no.	Signal name
1	24VDC
2	GND (0V)

<CN3 pin no.>

20 19

18 17

16

14

12

10

8

6 5

4


2

4

RS232C Connector (CN2)

Pin no.	Signal name	I/O	Description
1	TXD	Output	Receiving data
2	RXD	Input	Transmitting data
3	GND	—	Ground
4	—	—	
5	—	—	N·C
6	—	—	

% The internal connection diagram of RS232C communication cable is shown as below.

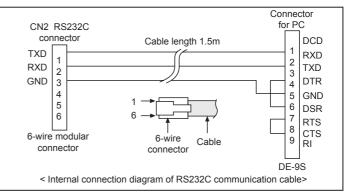

Parallel I/F Connector (CN3)

The Parallel I/F connector which is connected with a sequencer or mechanical contacts operates motion controller same as PC program. When input signal is ON, the input signal terminal and GEX terminal are connected by mechanical contacts or open collector output and open collector output transistor is ON when the output signal is ON.


Pin no.	Signal name		Description
1	RESET	Input	Reset
2	HOME	Input	Home search start command
3	STROBE	Input	Drive start command
4	X/JOG Y+	Input	X-axis designate/Jog Y+
5	Y/JOG Y-	Input	Y-axis designate/Jog Y-
6	STEPSL0/RUN+/JOG X+	Input	Register designate 0/Run+/Jog X+
7	STEPSL1/RUN-/JOG X-	Input	Register designate 1/Run-/JogX-
8	STEPSL2/SPD0	Input	Register designate 2/Drive speed designate 0
9	STEPSL3/SPD1	Input	Register designate 3/Drive speed designate 1
10	STEPSL4/JOG	Input	Register designate 4/Jog designate
11	STEPSL5/STOP	Input	Register designate 5/Drive stop
12	MODE0	Input	Operation mode designate 0
13	MODE1	Input	Operation mode designate 1
14	X DRIVE/END	Output	X-axis drive/Drive end pulse
15	Y DRIVE/END	Output	Y-axis drive/Drive end pulse
16	X ERROR	Output	X-axis error
17	YERROR	Output	Y-axis error
18	GEX		Ground
19	GEX	_	Ground
20	VEX	—	Power supply for sensor (24VDC, max. 100mA)

• X, Y-axis Input/Output Connector (CN4, CN5)

CN4 and CN5 are I/O signals for X-axis and Y-axis respectively.

The pin arrangement of CN4 and CN5 are equal. 'n' in the table means X for CN4 and Y for CN5.

Pin no.	Signal name	I/O	Description
1	n P+P	Output	Drive pulse in the CW + direction
2	n P+N	Output	Drive pulse in the CW - direction
3	n P-P	Output	Drive pulse in the CCW + direction
4	n P-N	Output	Drive pulse in the CCW - direction
5	n OUT0	Output	General output 0
6	n OUT1	Output	General output 1
7	n IN0	Input	General input 0
8	n IN1	Input	General input 1
9	n STOP2	Input	Encoder Z-phase
10	n STOP1	Input	Home
11	n STOP0	Input	Near Home
12	n LMT+	Input	+ direction limit
13	n LMT-	Input	- direction limit
14	EMG	Input	Emergency stop
15	GEX	_	Ground
16	VEX	_	Power supply for sensor (24VDC, max. 100mA)

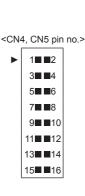

^Ло G

• A

• B

(D) Proximity Sensors

(A) Photoelectric Sensors

(B) Fiber Optic Sensors

(C) Door/Area Sensors

=)

(E) Pressure Sensors

(F) Rotary Encoders

(G) Connectors/ Connector Cables/ Sensor Distribution Boxes/Sockets

(H) Temperature Controllers

(I) SSRs / Power Controllers

(J) Counters

(K) Timers

(L) Panel Meters

(M) Tacho / Speed / Pulse Meters

(N) Display Units

(O) Sensor Controllers

(P) Switching Mode Power Supplies

(Q) Stepper Moto & Drivers & Controllers

(R) Graphic/ Logic Panels

(S) Field Network Devices

(T) Software

%CN4, 5 input/output is same as CN3 input/output connections.


Drive pulse output of motion controller which is inputted to motor driver is line driver output.

RS485 Connector (CN6)

Pin no.	Signal name	I/O	Description	
1	B (-)	I/O	Transmitting / Receiving data	
2	A (+)	I/O	Transmitting / Receiving data	
3	G	_	*1	

%1: Connect the ground when it is required depending on communication environments.


Connections

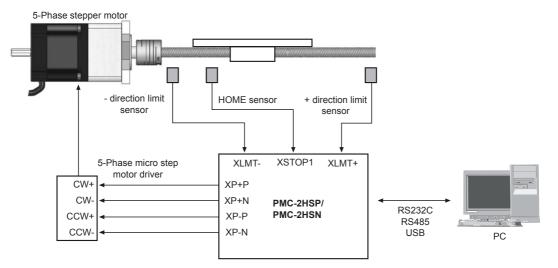


< Basic configuration of the motion controller (configuration only for X-axis) >

I/O Connections Diagram


◎ Input/Output connection circuit (CN3)

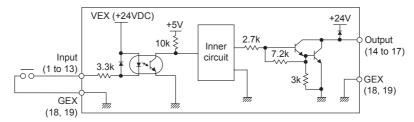

Section 2 Constant Constant

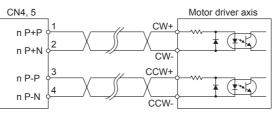

© Example of limit and home sensor connection

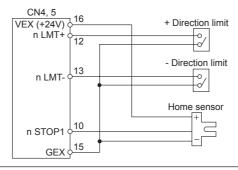

Dimensions

(unit: mm)

