

Autonics MEASURE COUNTER FM SERIES INSTRUCTION MANUAL



Thank you for choosing our Autonics product.
Please read the following safety considerations before use.

Safety Considerations

- ⚠ Please observe all safety considerations for safe and proper product operation to avoid hazards.
- ⚠ Safety considerations are categorized as follows.
- ⚠ **Warning** Failure to follow these instructions may result in serious injury or death.
- ⚠ **Caution** Failure to follow these instructions may result in personal injury or product damage.
- ⚠ The symbols used on the product and instruction manual represent the following
- ⚠ symbol represents caution due to special circumstances in which hazards may occur.


Warning

- Fail-safe device must be installed when using the unit with machinery that may cause serious injury or substantial economic loss.** (e.g. nuclear power control, medical equipment, ships, vehicles, railways, aircraft, combustion apparatus, safety equipment, crime/disaster prevention devices, etc.)
Failure to follow this instruction may result in fire, personal injury, or economic loss.
- Install on a device panel to use.**
Failure to follow this instruction may result in electric shock or fire.
- Do not connect, repair, or inspect the unit while connected to a power source.**
Failure to follow this instruction may result in electric shock or fire.
- Check 'Connections' before wiring.**
Failure to follow this instruction may result in fire.
- Do not disassemble or modify the unit.**
Failure to follow this instruction may result in electric shock or fire.


Caution

- When connecting the power/sensor input and relay output, use AWG 20(0.50mm²) cable or over, and tighten the terminal screw with a tightening torque of 0.74 to 0.90N·m.**
Failure to follow this instruction may result in fire or malfunction due to contact failure.
- Use the unit within the rated specifications.**
Failure to follow this instruction may result in fire or product damage.
- Use dry cloth to clean the unit, and do not use water or organic solvent.**
Failure to follow this instruction may result in electric shock or fire.
- Do not use the unit in the place where flammable/explosive/corrosive gas, humidity, direct sunlight, radiant heat, vibration, impact, or salinity may be present.**
Failure to follow this instruction may result in fire or explosion.
- Keep metal chip, dust, and wire residue from flowing into the unit.**
Failure to follow this instruction may result in fire or product damage.

Dimensions

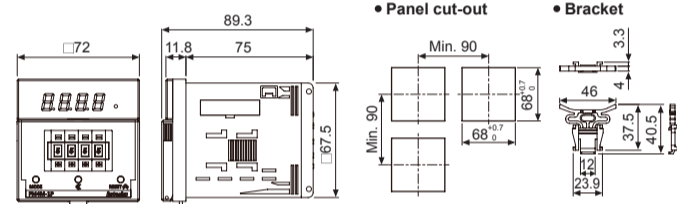

Counting Operation for Indicator (FM-M-14)

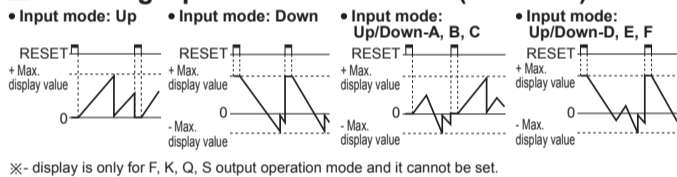

Input Operation Mode

Input mode	Voltage input (PNP) method	No-voltage input (NPN) method
Up/Down-A command input [Ud-A]		
Up/Down-B individual input [Ud-B]		
Up/Down-C phase difference input [Ud-C]		
Up adding input [Up]		
Up/Down-D command input [Ud-D]		
Up/Down-E individual input [Ud-E]		
Up/Down-F phase difference input [Ud-F]		
Down subtracting input [Dn]		



⚠ A: over min. signal width, B: over than 1/2 of min. signal width.
If the signal is smaller than these width, it may cause counting error (±1).
⚠ The above specifications are subject to change and some models may be discontinued without notice.
⚠ Be sure to follow cautions written in the instruction manual and the technical descriptions (catalog, homepage).

Specifications


Model	1-stage setting 2-stage setting Indicator	FM4M-1P4 FM4M-2P4 FM4M-14	FM6M-1P4 FM6M-2P4 FM6M-14
Display digit	4-digit	4-digit	6-digit
Character size (W×H)	6×10mm	6×10mm	4×8mm
Power supply	100-240VAC ~ 50/60Hz		
Permissible voltage range	90 to 110% of rated voltage		
Power consumption	●1-stage: max. 4.6VA ●2-stage: max. 5.8VA ●Indicator: max. 3.8VA		
Max. counting speed of CP1/CP2	Selectable 1cps/30cps/300cps/2kcps/5kcps		
Return time	Max. 500ms		
Min. signal width	RESET: approx. 20ms		
Input method	Selectable voltage input (PNP) method or no-voltage input (NPN) method [Voltage input (PNP) method]-input impedance: max. 10.8kΩ, [H]: 5-30VDC=, [L]: 0-2VDC [No-voltage input (NPN) method]-short-circuit impedance: max. 470Ω, short-circuit residual voltage: max. 1VDC, open-circuit impedance: min. 100kΩ		
One-shot output time	0.01 to 99.99 sec		
Control output	Type	●1-stage: Instantaneous SPDT (1c) ●2-stage: OUT1-Instantaneous SPST (1a), OUT2-Instantaneous SPST (1a)	
	Capacity	250VAC ~ 3A resistive load	
	Type	●1-stage: 1 NPN open collector ●2-stage: OUT1-1 NPN open collector, OUT2-1 NPN open collector	
	Capacity	NPN open collector output ●Load voltage: max. 30VDC= ●Load current: max. 100mA ●Residual voltage: max. 1VDC=	
Relay	Mechanical	Min. 5,000,000 operations	
life cycle	Electrical	Min. 100,000 operations (250VAC 3A resistive load)	
Insulation resistance		Over 100MΩ (at 500VDC megger)	
External power supply		Max. 12VDC= ±10% 50mA	
Memory retention		Approx. 10 years (non-volatile memory)	
Dielectric strength		2,000VAC 50/60Hz for 1 min (between all terminals and case)	
Noise immunity		±2kV the square wave noise (pulse width 1μs) by noise simulator	
Vibration	Mechanical	0.75mm amplitude at frequency 10 to 55Hz (for 1 min) in each X, Y, Z direction for 1 hour	
	Malfunction	0.5mm amplitude at frequency 10 to 55Hz (for 1 min) in each X, Y, Z direction for 10 minutes	
Shock	Mechanical	300ms ² (approx. 30G) in each X, Y, Z direction for 3 times	
	Malfunction	100ms ² (approx. 10G) in each X, Y, Z direction for 3 times	
Environment	Ambient temp.	-10 to 55°C, storage: -25 to 65°C	
	Ambient humi.	35 to 85%RH, storage: 35 to 85%RH	
Protection structure		IP20 (front part, IEC standard)	
Approval		CE, RoHS	
Weight	1-stage setting	Approx. 245g (approx. 180g)	
	2-stage setting	Approx. 265g (approx. 200g)	
	Indicator	Approx. 225g (approx. 160g)	

⚠ 1: The weight includes packaging. The weight in parenthesis is for unit only.
⚠ Environment resistance is rated at no freezing or condensation.

Connections

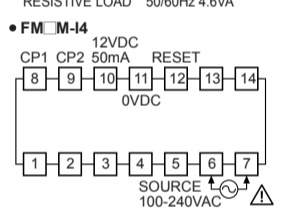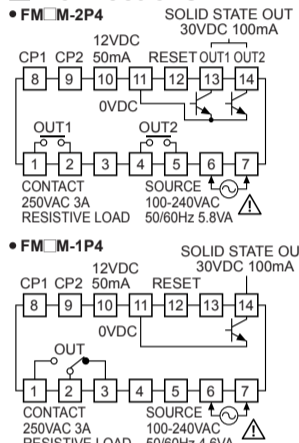


Example of Input/Output Connection

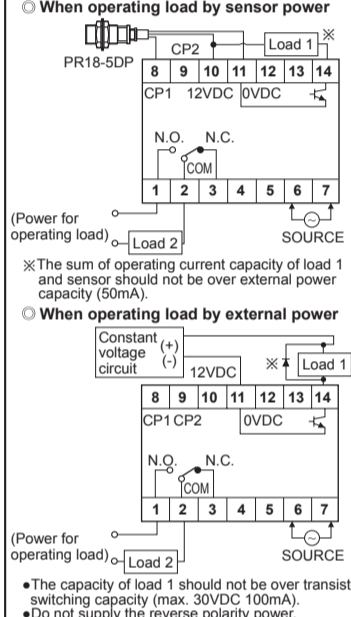


Output Operation Mode

Output mode	Input mode	Operation
One-shot output of OUT2 (0.01 to 99.99 sec)	Up, Up/Down-A, B, C	After count-up, counting display value increases or decreases until reset signal input is applied and self-holding output is maintained.
	Down, Up/Down-D, E, F	After count-up, counting display value is reset and it counts simultaneously. Self-holding output of OUT1 turns OFF after one-shot output time of OUT2.
One-shot output of OUT1 (0.01 to 99.99 sec)	Up, Up/Down-A, B, C	After count-up, counting display value is reset after one-shot output time of OUT2 and it counts simultaneously.
	Down, Up/Down-D, E, F	After count-up, counting display value is reset after one-shot output time of OUT2 and it counts simultaneously. Self-holding output of OUT1 turns OFF after one-shot output time of OUT2.
Self-holding output	Up, Up/Down-A, B, C	After count-up, counting display value is reset and it counts simultaneously. Self-holding output of OUT1 turns OFF after one-shot output time of OUT2.
	Down, Up/Down-D, E, F	After count-up, counting display value is reset and it counts simultaneously. Self-holding output of OUT1 turns OFF after one-shot output time of OUT2.

Parameter Setting

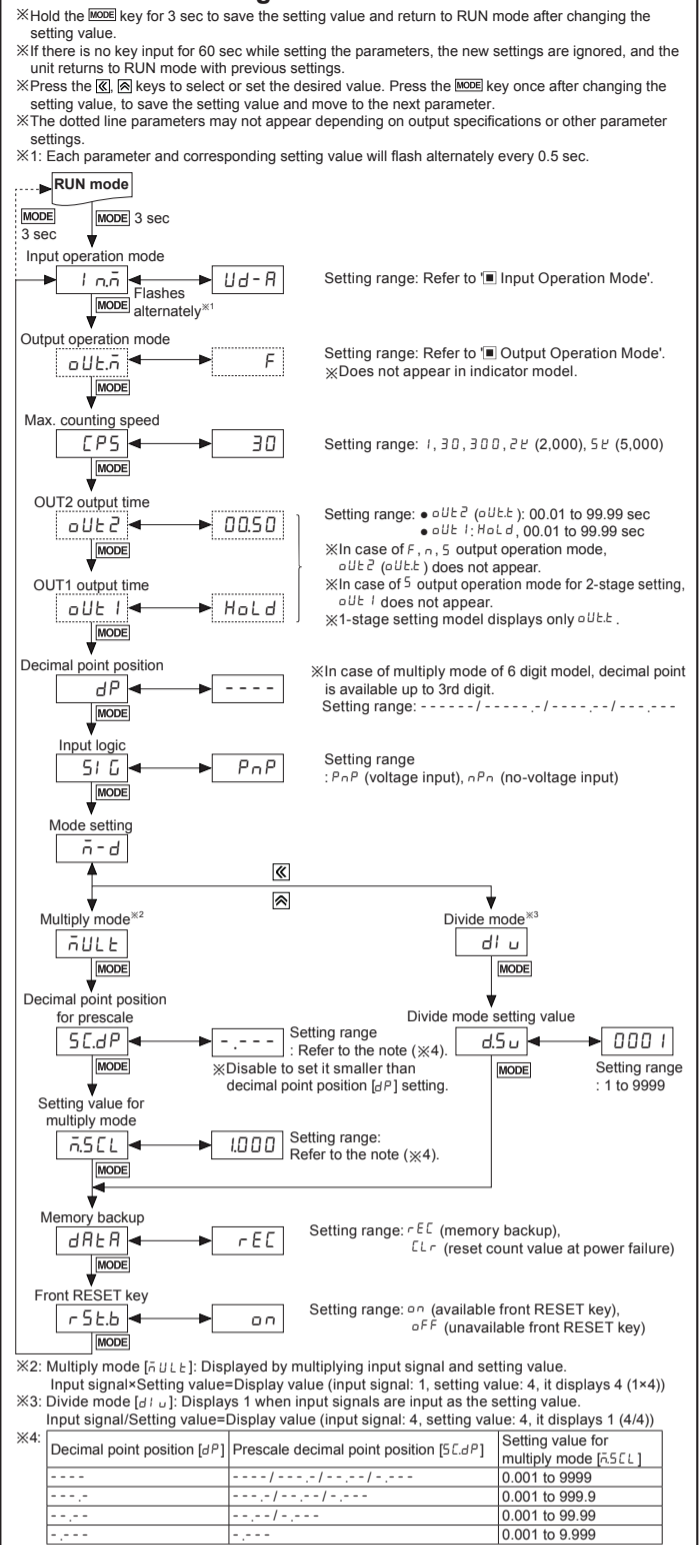

Input Connection

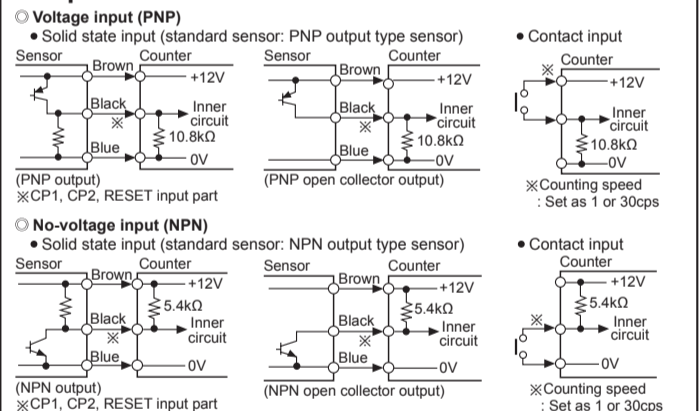

Factory Default

Parameter	Default	Parameter	Default	Parameter	Default	Parameter	Default
i n ā	Ud-A	oUt 2	0.050	Si G	P n P	ā 5 CL	0.000
oUt ā	F	oUt 1	HoLd	ā-d	āULt	dREr	rEC
CP S	30	dP	---	5CLP	---	r5tb	oN

Error Display and Output Operation

Error Display	Error description	Troubleshooting
E r r 0	Setting value is 0.	Change the setting value anything but 0.

⚠ When error occurs, the output turns OFF.
⚠ When 1st setting value is set as 0 (zero), OUT1 maintains OFF.
⚠ When 2nd setting value is smaller than 1st setting value, 1st setting value is ignored and only OUT2 output operates.
⚠ Indicator model does not have error display function.

Cautions during Use

- Follow instructions in 'Cautions during Use'. Otherwise, it may cause unexpected accidents.
- Use the product, 0.1 sec after supplying power.
- When supplying or turning off the power, use a switch or etc. to avoid chattering.
- Install a power switch or circuit breaker in the easily accessible place for supplying or disconnecting the power.
- In case of contact input, set count speed to low speed mode (1cps or 30 cps) to operate. If set to high speed mode (300cps, 2kcps, 5kcps), counting error occurs due to chattering.
- Keep away from high voltage lines or power lines to prevent inductive noise.
In case installing power line and input signal line closely, use line filter or varistor at power line and shielded wire at input signal line.
Do not use near the equipment which generates strong magnetic force or high frequency noise.
- This product may be used in the following environments.
 - Ⓐ Indoors (in the environment condition rated in 'Specifications')
 - Ⓑ Altitude max. 2,000m
 - Ⓒ Pollution degree 2
 - Ⓓ Installation category II

Major Products

- Photoelectric Sensors
- Fiber Optic Sensors
- Door Sensors
- Door Side Sensors
- Area Sensors
- Proximity Sensors
- Pressure Sensors
- Rotary Encoders
- Connector/Sockets
- Switching Mode Power Supplies
- Control Switches/Lamps/Buzzers
- Field Network Devices
- Laser Marking System (Fiber, Co., Nd: YAG)
- Laser Welding/Cutting System
- Temperature Controllers
- Temperature/Humidity Transducers
- SSR/Power Controllers
- Counters
- Timers
- Panel Meters
- Tachometer/Pulse (Rate) Meters
- Display Units
- Sensor Controllers

Autonics Corporation
http://www.autonics.com

HEAD QUARTERS:
18, Bansong-ro 513 beon-gil, Haeundae-gu, Busan, South Korea, 48002
TEL: 82-51-519-3232
E-mail: sales@autonics.com