Single Display, PID Control Temperature Controller

Features

- Realizes ideal temp. controlling with newly developed PID control algorithm and 100ms high speed sampling
- Built-in relay output or SSR output selectable
 Enables to phase control and cycle control with SSR drive output (SSRP function)
- Dramatically increased visibility using wide display part
- Mounting space saving with compact design Approx. 38% reduced size compared with existing model (depth-based)

Please read "Safety Considerations" in operation

• SV/PV deviation indicatable

/!\ manual before using.



Ordering Information

Τ		4	s –	- ['	1	4	R		
							Control output	N	Indicator - Without control output
								R	Relay output + SSR drive output ^{≭1}
						Pow	er supply	2	24VAC 50/60Hz, 24-48VDC
								4	100-240VAC 50/60Hz
				Δlar		Alarm output			No alarm output
					7 101	mouq		1	Alarm 1 output
							2	Alarm 1 output + Alarm 2 output ^{**2}	
								S	DIN W48×H48mm (terminal block type)
			0					SP	DIN W48×H48mm (11-pin plug type) ³
			Size	е				Y	DIN W72×H36mm
								М	DIN W72×H72mm
								Н	DIN W48×H96mm
								W	DIN W96×H48mm
		D '						L	DIN W96×H96mm
		Digi	t					4	9999 (4-digit)
	Settir	ng type	е					C	Set by touch switch
Item								—Т	Temperature controller

%1: In case of the AC voltage model, SSR drive output method (standard ON/OFF control, cycle, control, phase control) is available to select.

%2: It is unavailable for TC4SP, TC4Y.

%3: 11-pin socket (PG-11, PS-11(N)) for TC4SP: sold separately.

Specifications

Series		TC4S	TC4SP	TC4Y	TC4M	TC4W	TC4H	TC4L		
Power	AC power	100-240VAC \sim	100-240VAC~ 50/60Hz							
supply	AC/DC power	24VAC~ 50/60Hz, 24-48VDC==								
Allowable vol	tage range	90 to 110% of r	ated voltage							
Power	AC power	Max. 5VA (100-	240VAC 50/60H	Hz)						
consumption	AC/DC power	Max. 5VA (24VAC 50/60Hz), max. 3W (24-48VDC)								
Display meth	od	7-segment (red), other display (green, yellow, red) LED								
Character siz	e (W×H)	7.0×15.0mm		7.4×15.0mm	9.5×20.0mm	9.5×20.0mm	7.0×14.6mm	11.0×22.0mm		
	RTD	DPt100Ω, Cu50Ω (allowable line resistance max. 5Ω per a wire)								
Input type	Thermocouple	K(CA), J(IC), L(IC)								
Display	RTD			C±5°C): (PV ±0.5% or ±1°C, select the higher one) ±1-digit						
accuracy ^{*1}	Thermocouple		• Out of room temperature range: (PV ±0.5% or ±2°C, select the higher one) ±1-digit %For TC4SP, add ±1°C by accuracy standard.							

×1: Thermocouple L(IC) type, RTD Cu50Ω

• At room temperature (23°C ±5°C): (PV ±0.5% or ±2°C, select the higher one) ±1-digit

• Out of room temperature range: (PV ±0.5% or ±3°C, select the higher one) ±1digit

In case of TC4SP Series, ±1°C will be added.

(A)

(K) Timers


Specifications

									Photoelectric		
Series		TC4S	TC4SP	TC4Y	TC4M	TC4W	TC4H	TC4L	Sensors		
Control	Relay	$250VAC \sim 3A$	1a						(B)		
output	SSR	12VDC== ±2V	20mA Max.						Fiber		
Alarm outp	ut	AL1, AL2 Rela	y: 250VAC 1A	1a (※TC4SP,	TC4Y have A	L1 only.)			Optic Sensors		
Control me	thod	ON/OFF and F	, PI, PD, PID (control							
Hysteresis		1 to 100°C/°F (0.1 to 50.0°C/°	°F) variable					(C) Door/Area		
Proportiona	al band (P)	0.1 to 999.9°C	/°F						Sensors		
Integral tim	ie (I)	0 to 9999 sec									
Derivative t	time (D)	0 to 9999 sec							(D) Proximity		
Control per	riod (T)	0.5 to 120.0 se	C						Sensors		
Manual res	et	0.0 to 100.0%									
Sampling p	period	100ms							(E)		
Dielectric AC power 2,000VAC 50/60Hz for 1 min (between input terminal and power termi				d power termina	l)		Pressure Sensors				
strength	AC/DC power	1,000VAC 50/6	60Hz for 1 min	(between inpu	it terminal and	d power termina	l)				
Vibration		0.75mm ampli	ude at frequer	ncy of 5 to 55⊦	lz (for 1 min) i	n each X, Y, Z c	lirection for 2 h	ours	(F)		
Relay	Mechanical	OUT: over 5,000,000 operations, AL1/2: Over 5,000,000 operations						Rotary Encoders			
life cycle	Electrical	OUT: over 200 AL1/2: over 30	,000 operation 0,000 operation	ns (250VAC 3A ons (250VAC 1	resistive load A resistive load	d) ad)			(G) Connectors/		
Insulation r	resistance	Over 100MΩ (at 500VDC megger)							Connector Cables/		
Noise immu	unity								Sensor Distribution Boxes/Sockets		
Memory ret	tention	Approx. 10 yea	ars (when usin	g non-volatile	semiconducto	or memory type)					
Environ- A	mbient temperature	-10 to 50°C, st	orage: -20 to 6	0°C					(H) Temperature		
ment A	mbient humidity	35 to 85%RH,	storage: 35 to	85%RH					Controllers		
Insulation t	100	Double insulat	ion or reinford	ed insulation	mark: 🗖, Die	electric strength	between the n	neasuring input part			
Insulation t	уре	and the power	and the power part: AC power 2kV, AC/DC Power 1kV)								
Approval		CE c Al us							Controllers		
Weight ^{*2}		Approx. 141g	Approx. 123g	Approx. 174	g Approx. 20	04g Approx. 19	4g Approx. 19	94g Approx. 254g			
weigin		(approx. 94g)	(approx. 76g)	(approx. 85g) (approx. 1	33g) (approx. 12	22g) (approx. 1	22g) (approx. 155g)			
%2: The we	eight includes packag	ging. The weigh	t in parenthes	is is for unit on	ly.				Counters		

*Environment resistance is rated at no freezing or condensation


Connections

**TC4 Series has selectable control output; Relay output, and SSR drive output. AC/DC power type does not have SSRP function. XUse crimp terminals or teminals of size specified below

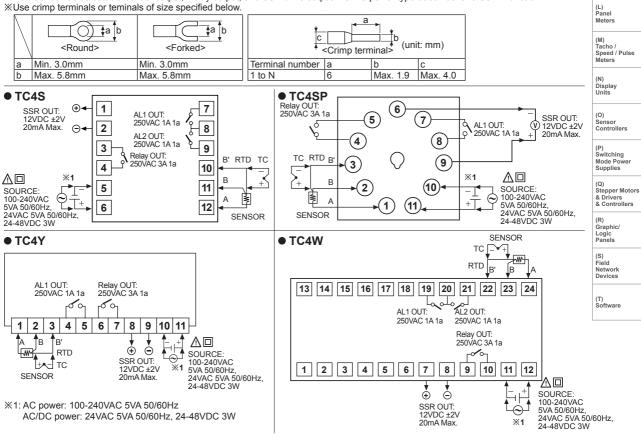


Autonics

TC Series

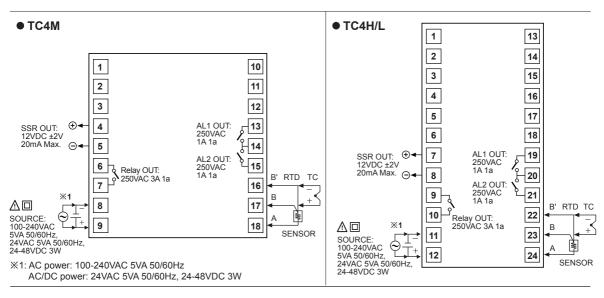

Dimensions

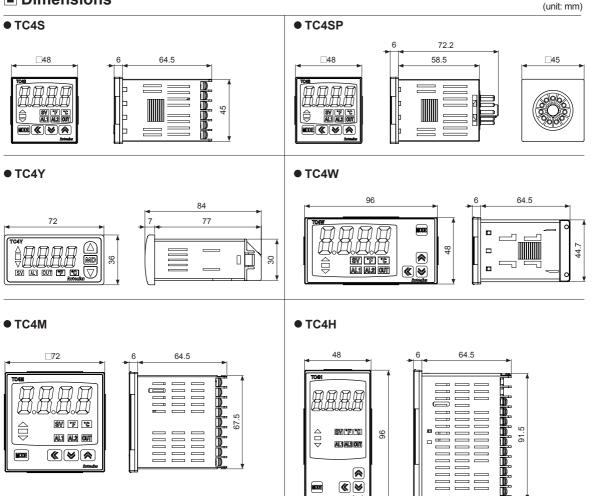


TC4L

__96 6 TCAL SV •F •C \subseteq AL1 AL2 OUT NODE «)» Am

64.5 - **Leieieie**ieie 91.5


Panel cut-out

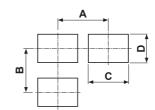


Size Model	A	В	С	D
TC4S	Min. 65	Min. 65	45 ^{+0.6}	45 ^{+0.6}
TC4SP	Min. 65	Min. 65	45 ^{+0.6}	45 ^{+0.6}
TC4Y	Min. 91	Min. 40	68 ^{+0.7}	$31.5^{+0.5}_{0}$
TC4M	Min. 90	Min. 90	68 ^{+0.7}	68 ^{+0.7}
TC4H	Min. 65	Min. 115	45 ^{+0.6}	92 ^{+0.8}
TC4W	Min. 115	Min. 65	92 ^{+0.8}	45 ^{+0.6}
TC4L	Min. 115	Min. 115	92 ^{+0.8}	92 ^{+0.8}


Bracket

• TC4S/TC4SP Series

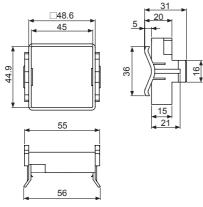

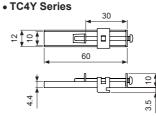

• TC4M, TC4W, TC4H, TC4L Series

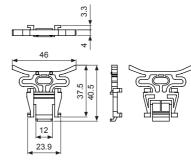

Մի


(P) Switching Mode Power Supplies

(Q) Stepper Motors & Drivers & Controllers

(R) Graphic/ Logic Panels

(S) Field Network Devices




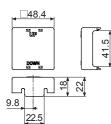

• RSA-COVER

(48×48mm)


Terminal cover (sold separately)

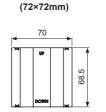


(f)


₽ ₽

• RMA-COVER

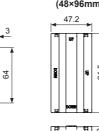

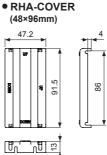



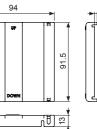

(A) Photoelectric Sensors

(B) Fiber Optic Sensors

(C) Door/Area Sensors

(D) Proximity Sensors

(E) Pressure Sensors

(F) Rotary Encoders

(G) Connectors/ Connector Cables/ Sensor Distribution Boxes/Sockets

(H) Temperature Controllers

(I) SSRs / Power Controllers

(J) Counters

(K) Timers

(L) Panel Meters

(M) Tacho / Speed / Pulse Meters

(N) Display Units

(O) Sensor Controllers



Autonics

3

86

Unit Description



- 1. Present temperature (PV) display
 - RUN mode: Present temperature (PV) display.
 Parameter setting mode: Parameter or parameter
 - setting value display.
- 2. Deviation indicator, Auto-tuning indicator It shows current temperature (PV) deviation based on set temperature (SV) by LED.

No.	PV deviation temp.	Deviation display
1	Over 2°C	 indicator ON
2	Below ±2°C	indicator ON
3	Under -2°C	 indicator ON

The deviation indicators $(\blacktriangle, \blacksquare, \triangledown)$ flash by every 1 sec when operating auto tuning.

- 3. Set temperature (SV) indicator Press any front key once to check or change current set temperature (SV), the set temperature (SV) indicator is ON and preset set value is flashed.
- **4. Temperature unit** (°C/°F) **indicator** It shows current temperature unit.



5. Control/alarm output indicator

- OUT: It will turn ON when control output (Main Control Output) is ON.
- *In case of CYCLE/PHASE control of SSR drive output, it will turn ON when MV is over 3.0%. (only for AC voltage type)
- AL1/AL2: It will light up when alarm output Alarm 1/ Alarm 2 are on.

6. MODE key

Used when entering into parameter group, returning to RUN mode, moving parameter, and saving setting values.

7. Adjustment

Used when entering into set value change mode, digit moving and digit up/down.


8. FUNCTION key

Press $\mathbb{B}+\mathbb{A}$ keys for 3 sec to operate function (RUN/ STOP, alarm output cancel, auto-tuning) set in inner parameter [d! - t'].

※Press SH+ keys at the same time in set value operation to move digit.

SV Setting

XIn case of changing set temperature from 210°C to 250°C.

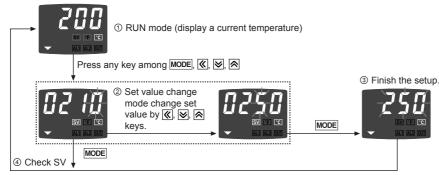


Parameter Reset

Reset all parameters as factory default. Hold the front $\mathbb{C}+\mathbb{C}+\mathbb{R}$ keys for 5 sec, to enter parameter reset [$i n l \ b$] parameter. Select " $l \ b \ c$] and all parameters are reset as factory default. Select " $n \ c$ " and previous settings are maintained. If setting parameter lock [$l \ n \ c$] or processing auto-tuning, parameter reset is unavailable.


Parameter Group					(A)
-	Run	mode -			Photoelectric Sensors
1 Press any key among	②	MODE 2 sec		(5) (3) MODE 4 sec	(B) Fiber Optic Sensors
↓ MODE, (€, ♥, ♠ SV setting	Parameter gr	↓ oup 1 [P用r 1]	Para	weter 2group [PAr 2]	(C) Door/Area Sensors
MODE		MODE 3 sec		MODE 3 sec	(D) Proximity Sensors
(4)		alarm temperature alarm temperature	ln-E Unit	Input type Temperature unit	(E) Pressure Sensors
		tuning	1 n - 6 ñ R u.F		(F) Rotary Encoders
	······	ortional band ral time	<u>L-5</u> H-5		(G) Connectors/ Connector Cables/ Sensor Distribution Boxes/Sockets
	Manu	ative time ial reset	<u>o-Ft</u>	Control output operation	(H) Temperature Controllers
		nal deviation correction) DFF control hysteresis	<u>oUt</u>	Control output	(I) SSRs / Power Controllers
※1: It is not displayed for AC/DC power mod ※If no key entered for 30 sec, it returns to R		tically and the set value of	E 	Control cycle	(J) Counters
 mind by entered to 50 sec, it retains to reparameter is not be saved. Mind by entered to 50 sec, it retains to reparameter is not be saved. 			AL - 2	AL2 alarm operation mode	(K) Timers
 Press any key once in RUN mode, it adva Press MODE key over 2 sec in RUN mode, Press MODE key over 4 sec in RUN mode. 	it advances to pa	irameter group 1.	L L A.E	LBA monitoring time	(L) Panel Meters
 ④ First parameter will be displayed on viewe ⑤ Press MODE key over 3 sec in the setting of 	er when it advance group, it returns to	es to the setting group. RUN mode.	<u> L 6 8,6</u> <u>d1 - E</u>	Digital input key	(M) Tacho / Speed / Pulse Meters
※Exception: Press MODE key once in SV %Press MODE key again within a sec after resec, it advances to the first parameter of p	turn to RUN mode	e by press MODE key over 3	Er.ñu	input break error Parameter lock	(N) Display Units
XParameter setup					(O) Sensor Controllers
Parameter group 2 → Parameter group 2 → Set parameter as the above considering • Check parameter set value after change	parameter relation				(P) Switching Mode Power Supplies
XIndicator model (TC4□-N□N)displays sha XIarm operation mode [яլ - ۱, яլ - 2] para	ded parameter (meter of paramete) of parameter group 2. er group 2 is decided whether			(Q) Stepper Motors & Drivers & Controllers
※If alarm operation mode [AL - 1, AL - 2] of p Manual State	parameter group 2	? is set to A뉴요_ / 5৮셔드 / ८৮셔!	, 위 <i>버</i> 5 par	ameter is not displayed.	(R) Graphic/ Logic Panels

(T) Software

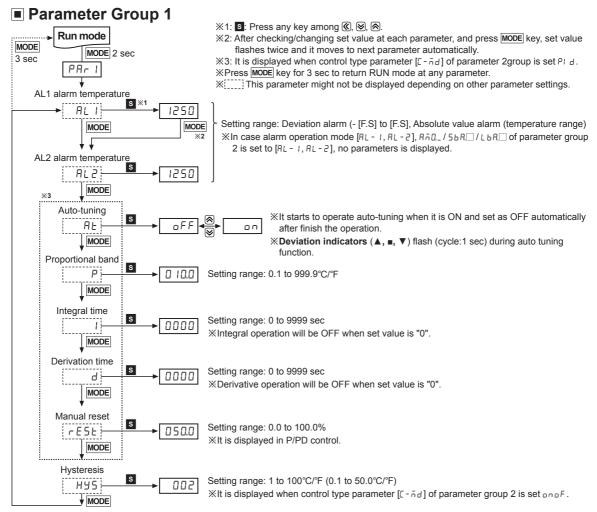

Parameter Group 2 ※1: S: Press any key among , ⊗, ⊗, ⊗. X2: After checking/changing set value at each parameter, and press MODE key, set value Run mode flashes twice and it moves to next parameter automatically. MODE *Press MODE key for 3 sec to return RUN mode at any parameter. MODE 4 sec 3 sec X[____] This parameter might not be displayed depending on other parameter settings. PAr 2 ∕ C U S.L dPt.H 115 H 2 5 ⊗Ì⊗ ⊗ Input type s ×1 REA In-E 111 11 ⊗ ⊗ MODE MODE ×2 When changing input type SV I n - b, H - 5u, L - 5u, AL I, AL 2, L b R b, A H 45 parameters are initialized. Temperature unit s 00 οF ※Front temperature unit indicator will flash when selecting the unit. Uni E When changing input type SVIn-b, H-5u, L-5u, RL I, RL2, LbRE, MODE L b R.b , R H y 5 parameters are initialized. Input correction In-b 000 Setting range: -999 to 999 (dPEL / EUSL: -199.9 to 999.9) MODE Input digital filter Setting range: 0.1 to 120.0 sec ñ R u.F D. I XSet input digital filter time for average input value affected control, and display value. MODE

Autonics

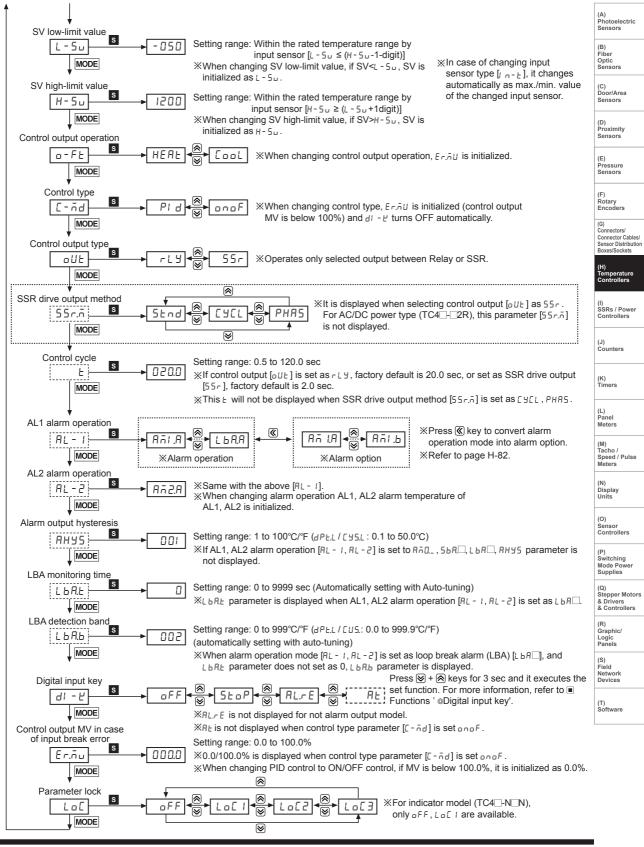

Autonics

H-79

Input sensor		Display	Input range (°C)	Input range (°F)
	K(CA)	REU	-50 to 1200	-58 to 2192
Thermocouple	J(IC)	JI E	-30 to 500	-22 to 932
	L(IC)	LIE	-40 to 800	-40 to 1472
	DPt100Ω	dPL.H	-100 to 400	-148 to 752
RTD		dPE.L	-100.0 to 400.0	-148.0 to 752.0
RID	Cu50Ω	С U 5.Н	-50 to 200	-58 to 392
	000022	E U 5.L	-50.0 to 200.0	-58.0 to 392.0

Factory Default

• SV setting

Parameter	Factory default
-	0

Parameter group 1

Parameter	Factory default
AL I	1250
AL 2	10 20
RĿ	oFF
Ρ	0 10.0
I	0000
d	0000
rESE	050.0
H95	002


• Parameter group 2

•			
Parameter	Factory default	Parameter	Factory default
In-E	L C A	E	020.0
Unit	٥٢	- RL - I	8ō1.8
1 n-b	0000		ח. וחח
ñRu.F	000.1	AL-2	8.5.7.R
L-5u	-050	ЯНУ5	0001
H-5u	1500	L & A.E	0000
o-FE	HERE	L 6 A.6	002
[-ād	PId	di - E	StoP
oUt	r L Y	Er.ñu	000.0
55r.ñ	Strid	LoC	oFF

AC/DC power type has no SSR drive output method [55r. \bar{n}] and supports only ON/OFF output when selecting 55r in control output [aUb].


Mounting

• TC4S/SP (48×48mm) Series

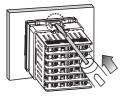

• TC4Y (72×36mm) Series

Other Series

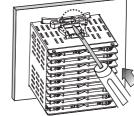

Mount the product on the panel, fasten bracket by pushing with tools as shown above. (In case of TC4Y, fasten bolts for bracket.)

Functions

◎ Alarm [AL - 1/AL - 2]

1.8 Alarm option

Alarm

operation

Set both alarm operation and alarm option by combining Each alarm operates individually in two alarm output models. When the current temperature is out of alarm range, alarm clears automatically. If alarm option is alarm latch or alarm latch and standby sequence 1/2, press digital input key(🛛+▲ 3 sec, digital input key[dl - L] of Parameter group 2 set as RL - E), or turn OFF the power and turn ON to clear alarm.

(A) Photoelectric Sensors

ables/ ribution ets

(B) Fiber Optic Sensors

(0)

Alarm operation

Mode	Name	Alarm operation	Description) (0 D S
A F D	_		No alarm output	
8 ñ l. 🗌	Deviation high-limit alarm	OFF ↓ H ↑ ON OFF ↓ H ↑ ON SV PV Δ Δ 100°C 110°C 90°C 100°C High deviation: Set as 10°C High deviation: Set as -10°C	If deviation between PV and SV as high-limit is higher than set value of deviation temperature, the alarm output will be ON.	(E Pi Si (E Pi Si
A ñ 2.	Deviation low-limit alarm	ON H OFF ON H OFF PV SV 90°C 100°C 100°C 110°C Lower deviation: Set as 10°C Lower deviation: Set as -10°C	If deviation between PV and SV as low-limit is higher than set value of deviation temperature, the alarm output will be ON.	(FRE GCC CC
A ñ 3.	Deviation high/low-limit alarm	ON H OFF H ON C SV PV 90°C 100°C 110°C High/Lower deviation: Set as 10°C	If deviation between PV and SV as high/low-limit is higher than set value of deviation temperature, the alarm output will be ON.	Si Bi Tr C
R ∩ 4.□	Deviation high/low-limit reserve alarm	ON H OFF H ON C C SV PV 90°C 100°C 110°C High/Lower deviation: Set as 10°C	If deviation between PV and SV as high/low-limit is higher than set value of deviation temperature, the alarm output will be OFF.	(I S C (J C
R ō 5.□	Absolute value high limit alarm	OFF H ON OFF H ON PV SV SV 90°C 100°C 100°C Absolute-value Alarm: Set as 90°C Set as 110°C	If PV is higher than the absolute value, the output will be ON.	(ŀ Ti (L P M
R ñ 6.	Absolute value low limit alarm	ON H OFF ON H OFF A A A A PV SV SV PV 90°C 100°C 100°C 110°C Absolute-value Alarm: Absolute-value Alarm: Set as 90°C	If PV is lower than the absolute value, the output will be ON.	(N Ti S M (N D U
5 b R.	Sensor break Alarm	<u> </u>	It will be ON when it detects sensor disconnection.	
L Ь Я.				

※ H: Alarm output hysteresis [RHY5]

Alarm option

• Alarm	, , ,		(P) Switching Mode Power
Mode	Name	Description	Supplies
8 n 🗌 . A	Standard alarm	If it is an alarm condition, alarm output is ON. If it is a clear alarm condition, alarm output is OFF.	(Q) Stepper Motor
8 n 🗌 .6	Alarm latch	If it is an alarm condition, alarm output is ON and maintains ON status. (Alarm output HOLD)	& Drivers & Controllers
₽ā <u>□</u> .C	Standby sequence 1	First alarm condition is ignored and from second alarm condition, standard alarm operates. When power is supplied and it is an alarm condition, this first alarm condition is ignored and from the second alarm condition, standard alarm operates.	(R) Graphic/ Logic
Rā 🗌.d	Alarm latch and standby sequence 1	If it is an alarm condition, it operates both alarm latch and standby sequence. When power is supplied and it is an alarm condition, this first alarm condition is ignored and from the second alarm condition, alarm latch operates.	(S) Field Network
8ā 🗆.E	Standby sequence 2	First alarm condition is ignored and from second alarm condition, standard alarm operates. When re-applied standby sequence and if it is alarm condition, alarm output does not turn ON. After clearing alarm condition, standard alarm operates.	Devices
8ōF	Alarm latch and standby sequence 2	Basic operation is same as alarm latch and standby sequence 1. It operates not only by power ON/OFF, but also alarm setting value, or alarm option changing. When re-applied standby sequence and if it is alarm condition, alarm output does not turn ON. After clearing alarm condition, alarm latch operates.	(T) Software


%Condition of re-applied standby sequence for standby sequence 1, alarm latch and standby sequence 1: Power ON Condition of re-applied standby sequence for standby sequence 2, alarm latch and standby sequence 2: Power ON, changing set temperature, alarm temperature [AL 1, AL 2] or alarm operation [AL - 1, AL - 2], switching STOP mode to RUN mode.

Sensor break alarm

The function that alarm output will be ON when sensor is not connected or when sensor's disconnection is detected during temperature controlling. You can check whether the sensor is connected with buzzer or other units using alarm output contact. It is selectable between standard alarm [56R.R], or alarm latch [56R.6].

◎ Loop break alarm (LBA)

It checks control loop and outputs alarm by temperature change of the subject. For heating control (cooling control), when control output MV is 100% (0% for cooling control) and PV is not increased over than LBA detection band [$L \ BR \ B$] during LBA monitoring time [$L \ BR \ B$], or when control output MV is 0% (100% for cooling control) and PV is not decreased below than LBA detection band [$L \ BR \ B$] during LBA monitoring time [$L \ BR \ B$] during time [$L \ BR \ B$

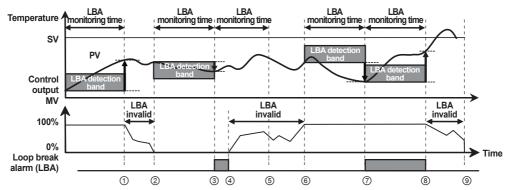


Start control to ①	When control output MV is 0% and PV is not decreased below than LBA detection band [L b Rb] during LBA monitoring time [L b Rb]	
① to ②	The status of changing control output MV (LBA monitoring time is reset.)	
② to ③	When control output MV is 0% and PV is not decreased below than LBA detection band [L b R.b.] during LBA monitoring time [L b R.b.], loop break alarm (LBA) turns ON after LBA monitoring time.	
3 to 4	Control output MV is 0% and loop break alarm (LBA) turns and maintains ON.	
4 to 6	The status of changing control output MV (LBA monitoring time is reset.)	
⑥ to ⑦	When control output MV is 100% and PV is not increased over than LBA detection band [L b Rb] during LBA monitoring time [L b Rb], loop break alarm (LBA) turns ON after LBA monitoring time.	
⑦ to ⑧	When control output MV is 100% and PV is increased over than LBA detection band [$L BRB$] during LBA monitoring time [$L BRE$] loop break alarm (LBA) turns OFF after LBA monitoring time.	
® to	The status of changing control output MV (LBA monitoring time is reset.)	

When executing auto-tuning, LBA detection band [L b Rb] and LBA monitoring time are automatically set based on auto tuning value. When AL1, AL2 alarm operation [RL - I, RL - 2] is set as loop break alarm (LBA) [L b RD], LBA detection band [L b Rb] and LBA monitoring time [L b Rb] parameter is displayed.

\odot SSR drive output function (SSRP function) [55 r.ā]

- SSRP function is selectable one of standard ON/OFF control, cycle control, phase control by utilizing standard SSR drive output.
- Realizing high accuracy and cost effective temperature control as linear output(cycle control and phase control).
- Select one of standard ON/OFF control [5End], cycle control [5ELd], phase control [PHR5] at [55nd] parameter of Parameter group 2. For cycle control, connect zero cross turn-on SSR or random turn-on SSR. For phase control, connect random turn-on SSR.

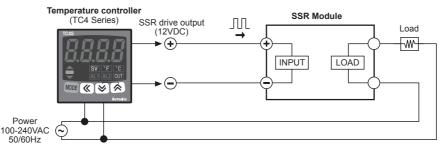

When selecting cycle or phase control mode, the power supply for load and temperature controller must be the same.

※In case of selecting cycle [LIJCL] or phase [PHR5] control mode for PID control, control cycle [L] is not allowed to set.
※For AC/DC power model (TC4□-□2R), this parameter [55r.ñ] is not displayed and it is available only standard control by relay or SSR.

Autonics

• Standard ON/OFF control mode [5End]

A mode to control the load in the same way as Relay output type.

(ON: output level 100%, OFF: output level 0%)


Cycle control [[][]

A mode to control the load by repeating output ON / OFF according to the rate of output within setting cycle. Having improved ON / OFF noise feature by Zero Cross type.

Phase control [PHR5]

A mode to control the load by controlling the phase within AC half cycle. Serial control is available.

RANDOM Turn-on type SSR must be used for this mode.

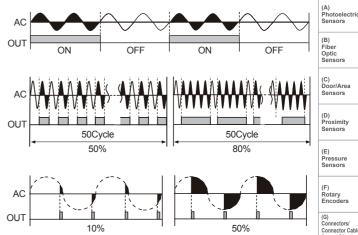

◎ Auto tuning [AL]

- When setting RE parameter to pr, front temperature unit display (°C or °F) indicator will be flickering during Auto tuning. After completing auto tuning, temperature unit display indicator returns to normal operation and RE parameter automatically becomes $[\Box \cap \rightarrow \Box FF]$.
- Set as DFF to stop auto tuning. ※It keeps previous P, I, D set values.
- . If SV is changed during auto tuning mode, auto tuning is stopped.
- PID time constants figured out through auto tuning function can be changed.
- If control method [[-nd] is set to proF, no parameters are displayed.
- Finish auto tuning when [aPEn] error occurs during the operation
- XIn case of [_PE_] error, auto tuning operation is not applicable.

© Input correction [/ n − b]

Controller itself does not have errors but there may be error by external input temperature sensor.

- E.g.) If actual temperature is 80°C but controller displays 78°C, set input correction value [1 n-b] as 002 and controller displays 80°C.
- XAs the result of input correction, if current temperature value (PV) is over each temperature range of input sensor, it displays HHHH or LLLL.

© Input digital filter [¬Au,F]

If current temperature (PV) is fluctuating repeatedly by rapid change of input signal, it reflects to MV and stale control is impossible. Therefore, digital filter function stabilizes current temperature value.

•For example, set input digital filter value as 0.4 sec, and it applies digital filter to input values during 0.4 sec and displays this values. Current temperature may be different by actual input value.


© Control method selection [[-ād]

It is selectable PID, ON/OFF control.

- In case of ON/OFF [onoF] mode, Hysteresis [HH5] parameter is displayed.
- In case of PID [PI d] mode, Proportional band [P], Integral time [1], and Derivative time [2] parameters are displayed.

© Hysteresis [H⊌5]

 Set control output ON / OFF interval in ON / OFF control mode.

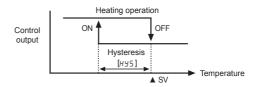

- If Hysteresis is too narrow, hunting (oscillation, chattering) could occur due to external noise.
- In case of ON / OFF control mode, even if PV reaches stable status, there still occurs hunting. It could be due to Hysteresis [HJ5] SV, load's response characteristics or sensor's location. In order to reduce hunting to a minimum, it is required to take into following factors consideration when designing temp. controlling; proper Hysteresis [HJ5], heater's capacity, thermal characteristics, sensor's response and location.

◎ Temperature unit selection [Uni E]

- · A function to select display temperature unit
- Unit display indicator will be ON when converting temperature unit.

Connectors/ Connector Cables. Sensor Distributio Boxes/Sockets

Temperature

(J) Counters

(I) SSRs / Powe Controllers

(K) Timers

(L) Panel Meters

(M) Tacho / Speed / Pulse Meters

(O) Sensor Controllers

(N) Display Units

(P) Switching Mode Power Supplies

(Q) Stepper Motors & Drivers & Controllers

(R) Graphic/ Logic Panels


(S) Field Network Devices

(T) Software

◎ Manual reset [r E 5 E]

When selecting P/PD control mode, certain temperature difference exists even after PV reaches stable status because heater's rising and falling time is inconsistent due to thermal characteristics of controlled objects, such as heat capacity, heater capacity. This temperature difference is called offset and manual reset [r E 5 L] function is to set/ correct offset.

- When PV and SV are equal, reset value is 50.0%. After control is stable, PV is lower than SV, reset value is over 50.0% or PV is higher than SV, reset value is below 50.0%.
- Manual reset [rE5E] by control result

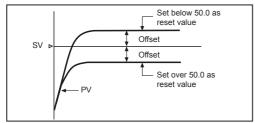

Manual reset function is applicable only to P / PD control mode.

© Control output MV when input sensor line is broken [בר.הֿם]

The function to set control output MV in case of open error. Users are able to set by ON/OFF setting or MV setting. It executes control output by set MV regardless of ON/OFF or PID control output.

© Digital input key (중 + 중 3 sec) [년/ - 년]

© Cool / Heat function [□-F上]

Generally there are two ways to control temperature, one (Heat-function) is to heat when PV is getting down (Heater). The other (Cool-function) is to cool when PV is getting higher (Freezer).

These functions are operating oppositely when it is ON/ OFF control or proportional control. But in this case PID time constant will be different due to PID time constant will be decided according to control system when it is PID control.

- Cool-function [Lool] and heat-function [HERE] must be set correctly according to the application, if set as opposite function, it may cause a fire. (If set cool-function [Lool] at heater, it will be maintained ON and it may cause a fire.)
- Avoid changing heat-function to cool-function or coolfunction to heat-function when the unit is operating.
- It is impossible to operate both function at once in this unit. Therefore, only one function should be selected only.

© SV High/Low limit [H-5□ / L-5□]

- It sets SV high/low limit Limit range of using temperature within temperature range for each sensor, user can set/ change set temperature (SV) within SV high limit [H-5u] to SV low limit [L-5u]. (X L-5u > H-5u cannot be set.)
- When changing input type [i _ - L], SV high limit [H 5 _] and SV low limit [L - 5 _] of using temperature will be initialized as max./min. value of sensor temperature range automatically.

Parameter		Operation		
OFF	oFF	It does not use digital input key function.		
RUN/STOP	StoP	Pauses control output. Auxiliary output (except loop break alarm, sensor break alarm)except Control output operates as setting. Hold the digital input keys for 3 sec to restart.		
Clear alarm	RL.r E	Clears alarm output by force. (only when alarm option is alarm latch, or alarm latch and standby sequence 1/2 .) This function is applied when present value is out of alarm operation range but alarm output is ON. Alarm operates normally right after clearing alarm.		
Auto-tuning	RĿ	 Starts/Stops auto-tuning. This function is same as auto-tuning[AL] of parameter group 1. (You can start auto-tuning [AL] of parameter group 1 and stop it by digital input key.) This parameter AL appears only when control method [L-ād] Parameter group 2 is set as PI d. When control method [L-ād] Parameter group 2 is set as or pF. 		

◎ Parameter lock [L □ []

A function to prevent changing SV and parameters of each setting group. Parameter setting values are still possible to check when parameter lock is set.

Display	Description	
oFF	Lock off	
LoEI	Lock parameter group 2	
Lo[2	Lock parameter group 1, 2	
Lo[]	Lock parameter group 1, 2, SV setting	

 $\times \Box FF$, $L \Box E I$ are available only for indicator (TC4 \square -N \square N).


© Error

Display	Description	Troubleshooting	
oPEn	Flashes if input sensor is disconnected or sensor is not connected.	e. within the rated temperature It range, this display	
нннн	Flashes if measured sensor input is higher than temperature range.		
LLLL	Flashes if measured sensor input is lower than temperature range.		

Output connections

Refer to page H-170 for output.

Application of relay output type

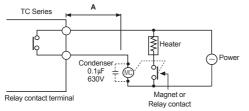

Keep A length as long as possible when wiring the temperature controller and the load. If wire length of A is short, counter electromotive force which occurs from a coil of magnet switch & power relay may flow in power line of the unit, and it may cause malfunction.

If wire length of A is short, please connect mylar condensers 104 (630V) on the both ends of "" (magnet coil) to protect electromotive force.

Proper Usage

O Simple "error" diagnosis

When the load (Heater etc) is not operated

Please check operation of the OUT indicator located in front panel of the unit.

If the OUT indicator does not operate, please check the parameter of all programmed mode.


If indicator is operating, please check the output (Relay, SSR drive voltage) after separating output line from the unit

When it displays oPEn during operation

This is a warning that external sensor is open. Please turn off the power and check the wire state of the sensor. If sensor is not open disconnect sensor line from the unit and short the input +, - terminal. Turn on the power of the unit and check the controller displays room temperature.

If this unit cannot display room temperature, this unit is broken. Please remove this unit and contact our service center. (When the input mode is thermocouple, it is available to display room temperature.)

Application of SSR drive output method

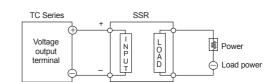

SSR should be selected by the capacity of load, otherwise, it may short-circuit and result in a fire. Indirect heated should be used with SSR for efficient working.

XPlease use a cooling plate or it may cause the capability deterioration, breakdown of SSR for a long usage.

※Refer to page H-70 for phase/cycle control connections.

(I) SSRs / Power Controllers

(J) Counters

(K) Timers

(L) Panel Meters

(M) Tacho / Speed / Pulse Meters

(N) Display Units

(O) Sensor Controllers

(P) Switching Mode Power Supplies

(Q) Stepper Motors

& Drivers & Controllers

 Follow instructions in 'Cautions during use'. Otherwise. It may cause unexpected accidents.

O Cautions during use

- · Check the polarity of the terminals before wiring the temperature sensor. For RTD temperature sensor, wire it as 3-wire type, using
- cables in same thickness and length. For thermocouple (CT) temperature sensor, use the designated compensation wire for extending wire.
- Keep away from high voltage lines or power lines to prevent inductive noise. In case installing power line and input signal line closely, use line filter or varistor at power line and shielded wire at input signal line.

Do not use near the equipment which generates strong magnetic force or high frequency noise.

- Install a power switch or circuit breaker in the easily accessible place for supplying or disconnecting the power.
- Do not use the unit for other purpose (e.g. voltmeter, ammeter), but temperature controller.
- When changing the input sensor, turn off the power first before changing. After changing the input sensor, modify the value of the

corresponding parameter.

- 24VAC, 24-48VDC power supply should be insulated and limited voltage/current or Class 2, SELV power supply device
- Make a required space around the unit for radiation of heat.

For accurate temperature measurement, warm up the unit over 20 min after turning on the power.

- Make sure that power supply voltage reaches to the rated voltage within 2 sec after supplying power.
- Do not wire to terminals which are not used.
- This unit may be used in the following environments. Indoors

(in the environment condition rated in 'Specifications') ②Altitude max. 2,000m

③Pollution degree 2 ④Installation category II (R) Graphic/ Logic Panels (S) Field Network Devices

(T) Software

Photoe	lectric
Sensor	s

(A)

(B) Fiber Optic Sensors

(C) Door/Area Sensors

(D) Proximity

Sensor

(E) Pressure Sensors

(F) Rotary Encoders

(G) Connectors/ Connector Cables/ Sensor Distribution Boxes/Sockets

Temperature