

Autonics

Multi-Channel Modular Type Temperature Controller TM SERIES

INSTRUCTION MANUAL



Thank you for choosing our Autonics product. Please read the following safety considerations before use.

Safety Considerations

- Please observe all safety considerations for safe and proper product operation to avoid hazards. Failure to follow these instructions may result in serious injury or death. The symbols used on the product and instruction manual represent the following: Warning, Caution, and Attention symbols.


Warning

- Fail-safe device must be installed when using the unit with machinery that may cause serious injury or substantial economic loss. Do not connect, repair, or inspect the unit while connected to a power source. Do not disassemble or modify the unit.


Caution

- When connecting the power input and relay output, use AWG 26~12 cable and connecting the sensor input and communication cable without dedicated cable. Use dry cloth to clean the unit, and do not use water or organic solvent. Do not use the unit in the place where flammable/explosive/corrosive gas, humidity, direct sunlight, radiant heat, vibration, impact, or salinity may be present. Keep metal chip, dust, and wire residue from flowing into the unit.

Ordering Information

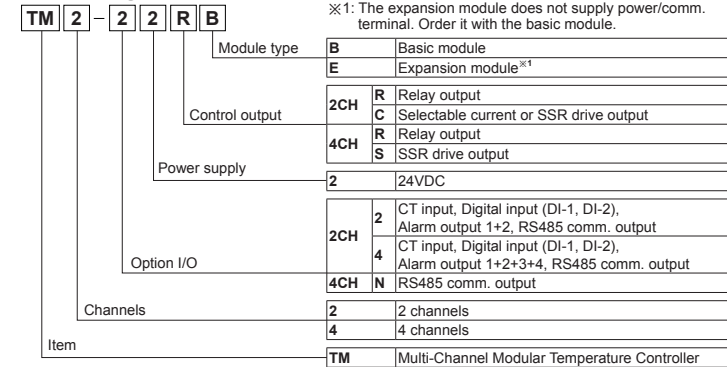

Connections and Block Diagram

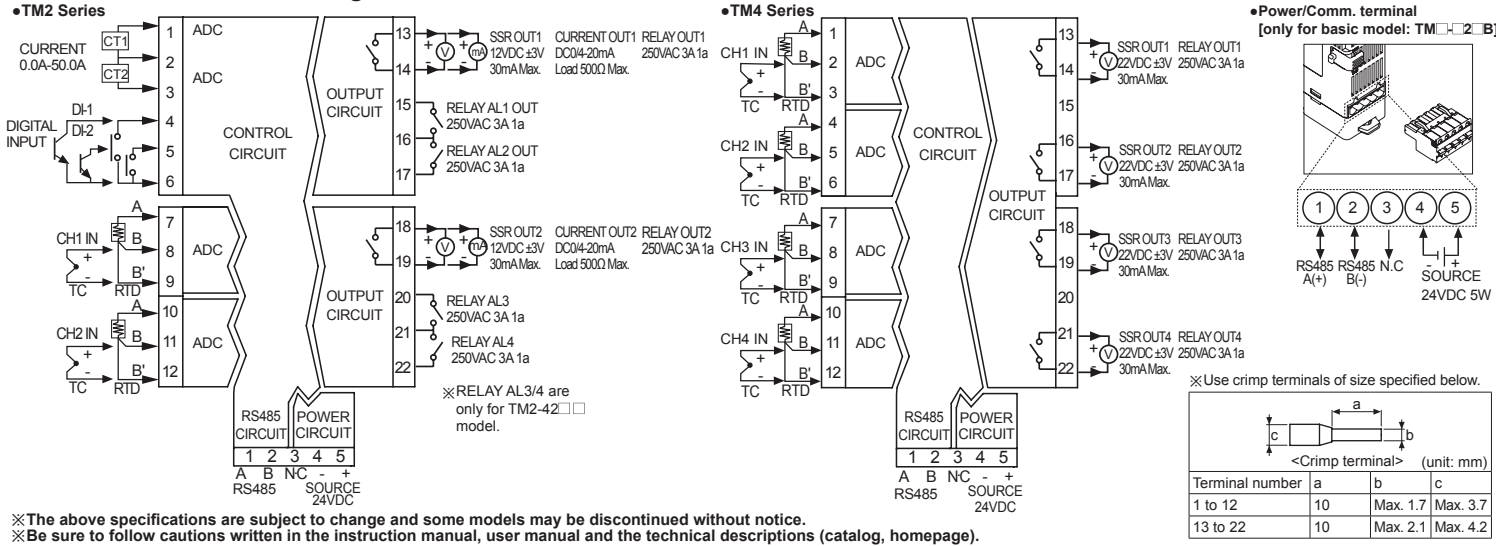

The above specifications are subject to change and some models may be discontinued without notice. Be sure to follow cautions written in the instruction manual, user manual and the technical descriptions (catalog, homepage).

Specifications

Table of specifications including Series (TM2, TM4), No. of channels, Power supply, Permissible voltage range, Display method, Input type, Sampling cycle, Measured accuracy, Influence of temp., Control output, Control method, Option output, Option input, Hysteresis, and Proportional/Integral/Derivative times.


Notes regarding input types and ranges, including factory defaults and environmental conditions.

Input Type and Range

Table listing various input types (K(CA), J(IC), E(CR), T(CC), B(PR), R(PR), S(PR), N(NN), C(TT), G(TT), L(IC), U(CC), Pt100, DPt100) and their corresponding temperature ranges.

Notes for input types: C(TT) is same as existing W5 (TT); G(TT) is same as existing W (TT).

Dimensions

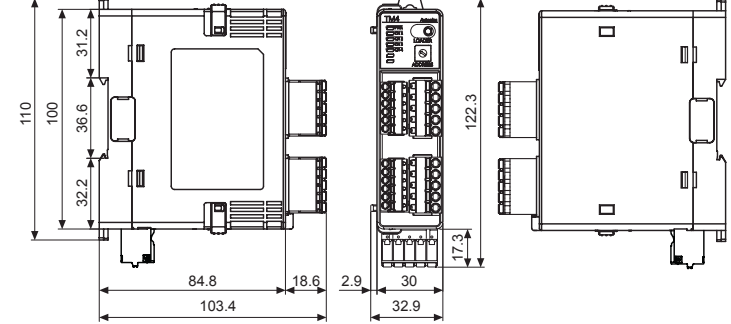

Unit Description


- 1. Sensor input connector, 2. Control output connector, 3. Power/Comm. terminal, 4. PC loader port, 5. Indicators (TM2 Series, TM4 Series).

Indicator status table showing PWR, CH1, CH2, AL1, AL2, AL3, and AL4 indicators with their initial power and control output states.

- 6. Communication address setting switch (SW1), 7. Communication address group switch (SW2), 8. Lock switch, 9. Rail Lock, 10. END cover.

Installation

- 1. Connector Connection, 2. Connection between modules, 3. Mounting with bolts, 3.1 Installing, 3.2 Removing.

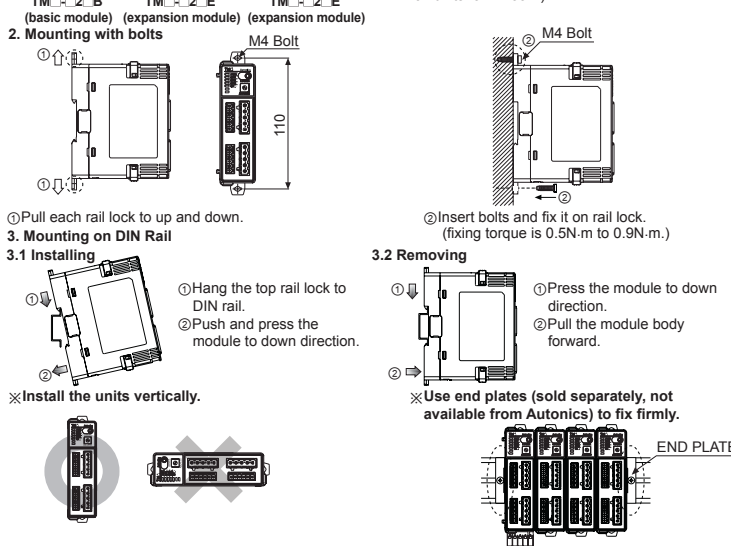

Communication Setting

Communication setting table with columns for Comm. protocol, Connection type, Application standard, Max. connection, Synchronous method, and Comm. method. Includes a SW1 switch configuration diagram.

SW2 switch configuration table showing address settings for units 01 through 15.

Comprehensive Device Management Program[DAQMaster]

Table of minimum specifications for the DAQMaster software, including system requirements like OS (Windows 98/NT/XP/Vista/7/8/10), memory (256MB+), and hard disk space (1GB+).

Manual

For the detail information and instructions, please refer to user manual and user manual for communication, and be sure to follow cautions written in the technical descriptions (catalog, homepage).

Error Display

Error display table mapping indicators (PWR, CH, Comm. output, DAQMaster) to their respective status messages.

Troubleshooting

Troubleshooting table with columns for Status and Troubleshooting steps, covering issues like LED indicators flash, output not operating, and external device response.

Cautions during Use

- 1. Follow instructions in 'Cautions during Use'. 2. Check the polarity of the terminals. 3. Keep away from high voltage lines. 4. Do not apply excessive power when connecting or disconnecting the connectors. 5. Install a power switch or circuit breaker. 6. Do not use the unit for other purpose. 7. When changing the input sensor, turn off the power first before changing. 8. 24VDC power supply should be insulated and limited voltage/current or Class 2, SELV power supply device. 9. Do not overlapping communication line and power line. 10. Make a required space around the unit for radiation of heat. 11. Make sure that power supply voltage reaches to the rated voltage within 2 sec after supplying power. 12. Do not wire to terminals which are not used. 13. Install DIN rail vertically from the ground. 14. This unit may be used in the following environments.

Major Products

List of major products including sensors, controllers, and communication equipment. Includes the Autonics Corporation logo, website (http://www.autonics.com), and headquarters address in Busan, South Korea.