

Autonics DIGITAL PRESSURE SENSOR(Pneumatic type) PSAN SERIES INSTRUCTION MANUAL

Thank you very much for selecting Autonics products.
For your safety, please read the following before using.

Safety Considerations

- Please observe all safety considerations for safe and proper product operation to avoid hazards.
- Warning Failure to follow these instructions may result in serious injury or death.
- Caution Failure to follow these instructions may result in personal injury or product damage.


Warning

- Fail-safe device must be installed when using the unit with machinery that may cause serious injury or substantial economic loss. (e.g. nuclear power control, medical equipment, ships, vehicles, railways, aircraft, combustion apparatus, safety equipment, crime/disaster prevention devices, etc.) Failure to follow this instruction may result in personal injury, economic loss or fire.
- Do not use in the place where flammable/explosive/corrosive gas, high humidity, direct sunlight, radiant heat, vibration, impact, or salinity may be present. Failure to follow this instruction may result in explosion or fire.
- Install on a device panel or to a pressure port directly to use. Failure to follow this instruction may result in fire.
- Do not connect, repair, or inspect the unit while connected to a power source. Failure to follow this instruction may result in fire.
- Check 'Connections' before wiring. Failure to follow this instruction may result in fire.
- Do not disassemble or modify the unit. Failure to follow this instruction may result in fire.


Caution

- Use the unit within the rated specifications. Failure to follow this instruction may result in fire or product damage.
- Use dry cloth to clean the unit, and do not use water or organic solvent. Failure to follow this instruction may result in product damage.
- This product is designed to detect the pressure of noncorrosive gas. Do not use for corrosive gas. Failure to follow this instruction may result in product damage.
- Keep metal chip, dust, and wire residue from flowing into the unit. Failure to follow this instruction may result in fire or product damage.


Dimensions

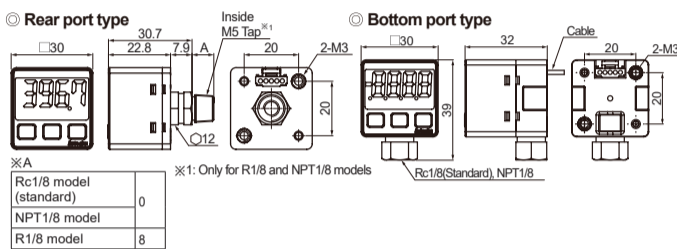

Accessory

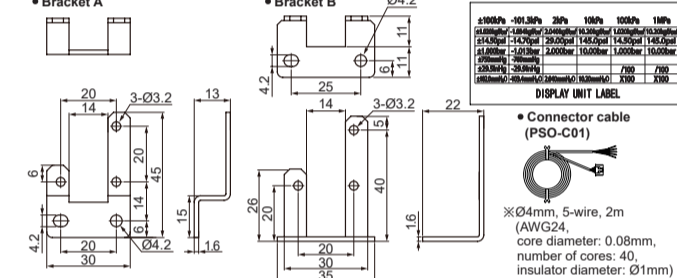

Sold separately

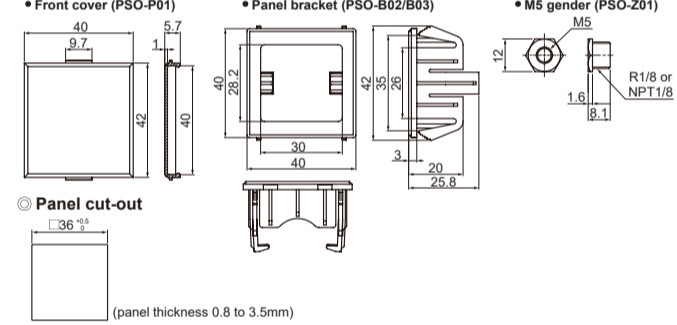

Unit Descriptions

- Range of rating pressure: It is possible to change the pressure unit in Pressure sensor. Please use different unit as label for your application.
- 4digit LED display(RED): Used to indicate measured pressure value, setting value and error message.
- Output1 indicator(RED): Output 1 is ON, LED will be ON.
- Output2 indicator(GREEN): Output 2 is ON, LED will be ON.
- Key: Used to enter into Preset/Parameter setting mode and to save Setting mode.
- Key: Used to set parameter and preset, peak value check mode, function setting or output operation mode.
- Key: Used for zero point adjustment function by pressing key over 1 sec. simultaneously in RUN mode.

Functions

- Pressure unit change**: PSAN-V01C(P) and PSAN-C01C(P) has 7 kinds of pressure unit, PSAN-01C(P) and PSAN-1C(P) has 5 kinds of pressure unit. Please select the proper unit for application.
 - PSAN-V01C(P), PSAN-C01C(P): kPa, kgf/cm², bar, psi, mmHg, inHg, mmH₂O
 - PSAN-01C(P), PSAN-1C(P): MPa, kPa, kgf/cm², bar, psi
- Output mode change**: There are 5 kinds of control output mode in order to realize the various pressure detection.
 - Hysteresis mode [HY5A]: When needed to change hysteresis for detecting pressure.
 - Window comparison output mode [W1~W2]: When needed to detect pressure in certain area.
 - Hysteresis - Window comparison output mode [HY5~W2]: When both hysteresis mode and window comparison output mode are required.
 - Automatic sensitivity setting mode [RUL0~2]: When needed to set detection sensitivity automatically at proper position.
 - Forced output control mode [FOUT]: When needed to display pressure with remaining comparison output OFF regardless of setting value.
- Control output change**: Type of control output for Out1 and Out2 can be able to set Normally Open and Normally Closed. Note that Normally Open and Normally Closed provide opposite output.
- Response time change(chattering prevention)**: It can prevent chattering of control output by changing response time. It is able to set 5kinds of response time(2.5ms, 5ms, 100ms, 500ms, 1000ms) and if the response time is getting longer, the detection will be more stable by increasing the number of digital filter.
- Analog output scale setting and Hold/Auto Shift setting**:
 - Analog voltage output scale setting: The scale function for analog output voltage (1-5VDC) is not fixed to the rated pressure range. It can be changed for User's application. Analog output is 1-5VDC within the pressure range from the pressure point [R-1] for 1VDC to the pressure point [R-5] for 5VDC.
 - Analog current output scale setting: The scale for analog output Current (DC4-20mA) is not fixed to the rated pressure range. It can be changed for User's application. Analog output is 4-20mA within the pressure range from the pressure point [R-1] for 4mA to the pressure point [R-2] for 20mA.
 - Hold/Auto Shift input setting:
 - Hold function: A function to hold PV and Control output while signal is input.
 - Auto Shift function: A function to compensate the setting value for changed value of reference pressure as threshold level if reference pressure of the device changes.
- Key lock**: The key lock function prevents key operations so that conditions set in each mode. [Preset/parameter mode are not inadvertently changed. There are 2 kinds of key lock functions available.
 - LoC1: All keys are locked; therefore it is not available to change parameter settings, preset value, zero adjustment, High/Low peak check and SHI n data initialization. (Lock setting change is available)
 - LoC2: Partially locked status; therefore it is not available to change parameter settings only(Lock setting change is available). Other settings are still available.
 - oFF: All of the setting is available, all keys are unlocked.
- Zero point adjustment**: The zero point adjustment function forcibly sets the pressure value to "Zero" when the pressure port is opened to atmospheric pressure. When the zero adjustment is applied, analog output [Voltage or Current] is changed by this function. (Press key + key over 1 sec. in RUN mode.)
- High Peak / Low Peak Hold Function**: This function is to diagnosis malfunction of the system caused by parasitic pressure or to check through memorizing the max./min. pressure occurred from the system.

Error

| Display | Description | Countermeasures |
|-------------|---|--|
| Err1 | When external pressure is input while adjusting zero point. | Try again after removing external pressure. |
| Err2 | When overload is applied on control output | Remove overload. |
| Err3 | When setting condition is not met in Auto sensitivity setting mode. | Check setting conditions and set proper setting values. |
| LLLL | When applied pressure exceeds Low-limit of display pressure range. | Apply pressure within display pressure range. |
| HHHH | When applied pressure exceeds High-limit of display pressure range. | Apply pressure within display pressure range. |
| -HH- / -LL- | Auto shift correction error. | Set the corrected setting value within setting pressure range. |
| -HL- | | |

※ The above specifications are subject to change and some models may be discontinued without notice.
※ Be sure to follow cautions written in the instruction manual and the technical descriptions (catalog, homepage).

Specifications

| Pressure type | Gauge pressure | | | |
|--------------------------|---|---|--|---------------------------|
| | Negative pressure | Standard pressure | Standard pressure | Compound pressure |
| Model | PSAN-(D)V01C(P)V- | PSAN-(D)01C(P)V- | PSAN-(D)1C(P)V- | PSAN-(D)C01C(P)V- |
| Voltage output | PSAN-V01C(P)A- | PSAN-01C(P)A- | PSAN-1C(P)A- | PSAN-C01C(P)A- |
| Current output | PSAN-V01C(P)H- | PSAN-01C(P)H- | PSAN-1C(P)H- | PSAN-C01C(P)H- |
| Rated pressure range | 0.0 to -101.3kPa | 0.0 to 100.0kPa | 0 to 1,000kPa | -101.3kPa to 100.0kPa |
| Display pressure range | 5.0 to -101.3kPa | -5.0 to 110.0kPa | -101.3 to 1,100kPa | -101.3kPa to 110.0kPa |
| Min. display unit | 0.1kPa | 0.1kPa | 1kPa | 0.1kPa |
| Max. pressure range | 2 times of rated pressure | 2 times of rated pressure | 1.5 times of rated pressure | 2 times of rated pressure |
| Applied fluid | Air, Non-corrosive gas | | | |
| Power supply | 12-24VDC ± 10% (ripple P-P. Max. 10%) | | | |
| Current consumption | Max. 50mA (Analog Current Output type Max 75mA) | | | |
| Control output | NPN or PNP open collector output • Load voltage: Max. 30VDC • Load current: Max. 100mA • Residual voltage - NPN: Max. 1VDC, PNP: Max. 2VDC | | | |
| Hysteresis | Min. display range | | | |
| Repeat error | ±0.2% F.S. ± Min. display range | | | |
| Response time | Selectable 2.5ms, 5ms, 100ms, 500ms, 1000ms | | | |
| Short circuit protection | Built-in | | | |
| Analog output | Voltage output | • Output voltage: 1-5VDC ± 2% F.S. • Linear: Max. ±1% F.S. • Output impedance: 1kΩ • Zero point: Max. 1VDC ± 2% F.S. • Span: Max. 4VDC ± 2% F.S. • Response time: 50ms • Resolution: Automatically changed to 1/1000 or 1/2000 by pressure unit | | |
| | Current output | • Output current: DC4-20mA ± 2% F.S. • Linear: Max. ±1% F.S. • Response time: 70ms • Zero-point: Max. DC4mA ± 2% F.S. • Span: Max. DC16mA ± 2% F.S. • Resolution: Automatically changed to 1/1000 or 1/2000 by pressure unit | | |
| Display method | Resolution | 1000 | 2000 | 1000 |
| | Min. Display interval | 1000 | 2000 | 1000 |
| Display accuracy | MPa | 0.001 | 0.001 | 0.001 |
| | kPa | 0.1 | 0.1 | 0.1 |
| Min. Display interval | kgf/cm ² | 0.001 | 0.001 | 0.001 |
| | bar | 0.001 | 0.001 | 0.001 |
| Min. Display interval | psi | 0.01 | 0.01 | 0.01 |
| | mmHg | 0.4 | 0.4 | 0.4 |
| Min. Display interval | inHg | 0.02 | 0.02 | 0.02 |
| | mmH ₂ O | 0.1 | 0.1 | 0.1 |
| Display accuracy | 0°C to 50°C: Max. ±0.5% F.S., -10 to 0°C: Max. ±1% F.S. | | | |
| Dielectric strength | 1000VAC 50/60Hz for 1 minute | | | |
| Insulation resistance | Over 50MΩ (at 500VDC megger) | | | |
| Vibration | 1.5mm amplitude at frequency of 10 to 55Hz (for 1 min.) in each of X, Y, Z direction for 2 hours | | | |
| Environment | Ambient temp. -10 to 50°C, storage: -20 to 60°C Ambient humi. 30 to 80%RH, storage: 30 to 80%RH | | | |
| Protection | IP40 (IEC specification) | | | |
| Rear port type | Front case: Polycarbonate, Rear case: Polycarbonate, Pressure port: Nickel Plated Brass | | | |
| Material | Front case: Polycarbonate, Rear case: Polybutylene Terephthalate + Glass Fiber 15%, Pressure port: Nickel Plated Brass | | | |
| Cable | Connector cable (Ø4mm, 5-wire, Length: 2m) (AWG24, Core diameter: 0.08mm, Number of cores: 40, Insulator out diameter: Ø1mm) | | | |
| Approval | CE | | | |
| Weight | Rear port type: Approx. 165g (approx. 80g) | | Bottom port type: Approx. 170g (approx. 85g) | |


※ 1: In model name, (D) is bottom port type, (P) is PNP output type, is as pressure port.
※ 2: In model name, (V) is pressure port.
※ 3: It is allowed to select one analog output type only.
※ 4: Resolution (1000/2000) of min. Display interval is automatically selected depend on pressure units.
※ 5: This weight is with packaging and the weight in parentheses is only unit weight.

Output Operation Mode

PSAN series has 5 kinds of output operation mode, please use proper output operation mode in accordance with detection.

- Hysteresis mode [HY5A]**: It is able to set certain value for pressure detection level [5t1, 5t2] and hysteresis [HY51, HY52].
- Window comparison output mode [W1~W2]**: It is able to set the range for high [Hi-1, Hi-2] / low [Lo-1, Lo-2] limit of pressure detection level when it is required to detect pressure at a certain range. Detection hysteresis is fixed to min. display range.
- Hysteresis-window comparison output mode [HY5~W2]**: It is available to set hysteresis mode [5t1, 5t2] and window comparison output mode when both hysteresis mode and window comparison output mode are necessary. Detection hysteresis is fixed to min. display range.
- Automatic sensitivity setting mode [RUL0~2]**: This function is to set pressure detection level to the proper position automatically. It is set by applied pressure from two positions [5t1, 5t2]. Detection hysteresis is fixed to min. display range. The pressure detection level [5t1, 5t2] is shown in the following calculation. $5t1 = (5t1 + 5t2) / 2$
- Forced output control mode [FOUT]**: Used to display pressure with forcibly holding comparison output OFF regardless of setting value. In parameter setting, if output operation mode setting [FOUT] is changed to [FOUT], forced output control mode is operated. OUT1, 2 can be ON/OFF manually by pressing key. While the forced output control mode is applied.

Input/Output Circuit and Connections

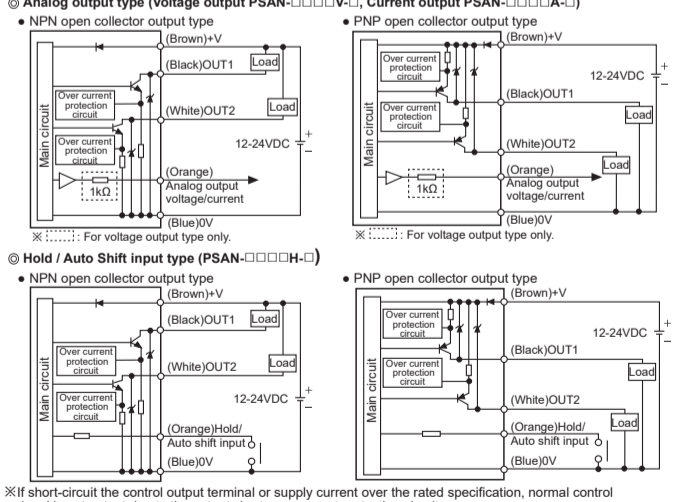


Installation

- Pressure port is divided as basic and option specification. Therefore, be sure that to use commercially available one touch fitting.
 - Place connect it by using spanner(12mm) at the metal part in order not to overload on the body when connecting one touch fitting.
 - Two different fixing brackets are provided for PSAN model. Select proper one with considering your application environments.
 - At first, please unscrew hexagon wrench bolt and assemble the bracket on this unit by fixing hexagon the wrenchbolt. In this case, tightening torque of hexagon wrench should be max. 3N·m. It may cause mechanical problems.
-
5. Panel bracket (PSO-B02) and front protection cover (PSO-P01) are optional to set. Please see the figure for installation.
6. Do not pull the cable with a tensile strength of 30N or over.

Caution

- The tightening torque of one touch fitting should be max. 10N·m. It may cause mechanical problems.

Setting

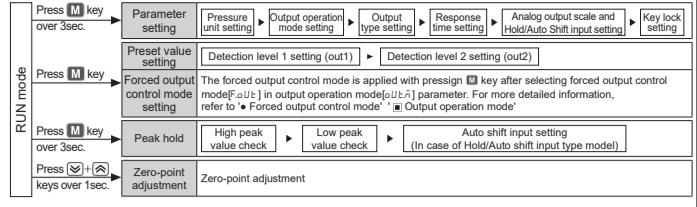

Parameter Setting

If the key lock is set (lock1 or lock2), unlock the key lock before setting parameters.
Press key to change setting values.
Press key to save setting value in each parameter and move to next parameters.
When pressing key for 3 sec in the middle of parameter setting, current setting value will be saved and [RUN] will flash twice, then returned to RUN mode.

Parameter Setting details:

- Pressure unit: (MPa), (kPa), (kgf/cm²), (bar), (mmH₂O), (inHg), (mmHg), (psi)
- Output operation mode: (Normal Open), (Normal Closed), (Normally Open), (Normally Closed)
- Hysteresis mode: (HY5A), (HY51), (HY52)
- Window comparison output mode: (W1), (W2)
- Auto sensitivity setting mode: (RUL0), (RUL1), (RUL2)
- Forced output control mode: (FOUT)
- Resolution: (1000), (2000)
- Response time: (2.5), (5.0), (100), (500), (1000) ms

Preset Setting

[RUN] flashes twice when returning to RUN mode.
Press key to change setting values.
Press key to save setting value in each parameter and move to next parameters.

Preset Setting details:

- Hysteresis mode: (HY51), (HY52)
- Automatic sensitivity setting mode: (RUL0), (RUL1), (RUL2)
- Window comparison output mode: (W1), (W2)
- Hysteresis-Window comparison output mode: (HY5~W2)

Zero point adjustment

- Press key + key for over 1sec. at the same time putting an applied pressure in state of the atmospheric pressure.
 - When the zero point adjustment is completed, it will display 0.0 and return to RUN mode automatically.
- ※ If executing zero point adjustment on external pressure being at pressure port [Err1] flashes 5 times. Please execute it in the atmospheric pressure after removing external pressure.
※ Please execute zero point adjustment regularly.

Cautions during Use

- Follow instructions in 'Cautions during Use'. Otherwise, it may cause unexpected accidents.
- 12-24VDC power supply should be insulated and limited voltage/current or Class 2, SELV power supply device.
- Use the product, 3 sec after supplying power.
- When using switching mode power supply, frame ground (F.G.) terminal of power supply should be grounded.
- Wire as short as possible and keep away from high voltage lines or power lines, to prevent inductive noise.
- This unit may be used in the following environments:
 - Indoors (in the environment condition rated in 'Specifications')
 - Altitude max. 2,000m
 - Pollution degree 3
 - Installation category II